


# FLEXIDOME IP micro 2000 - Quick Installation Guide

# 1


## Disassemble

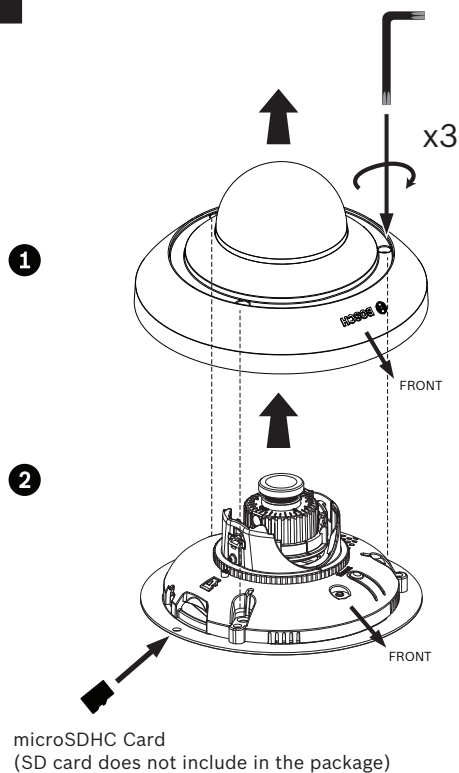

microSDHC Card  
(SD card does not include in the package)


# 2

## Mount

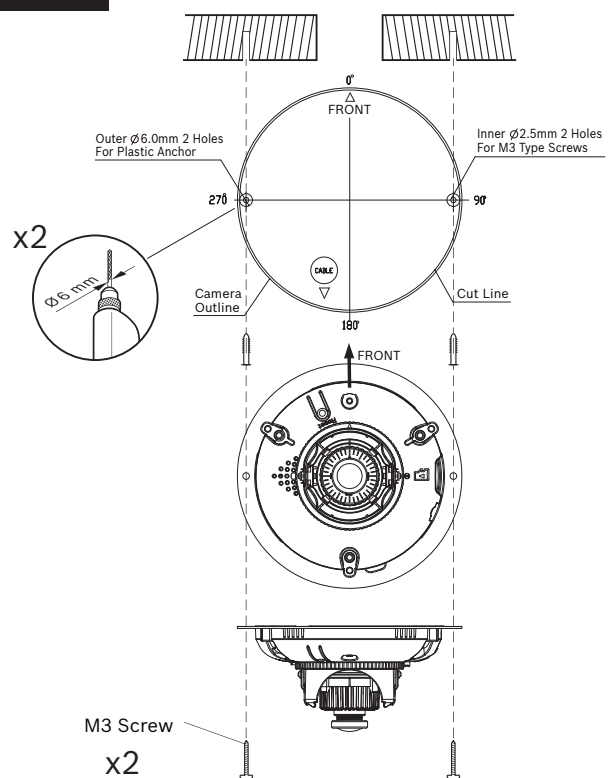

## 3

## Network (Power)

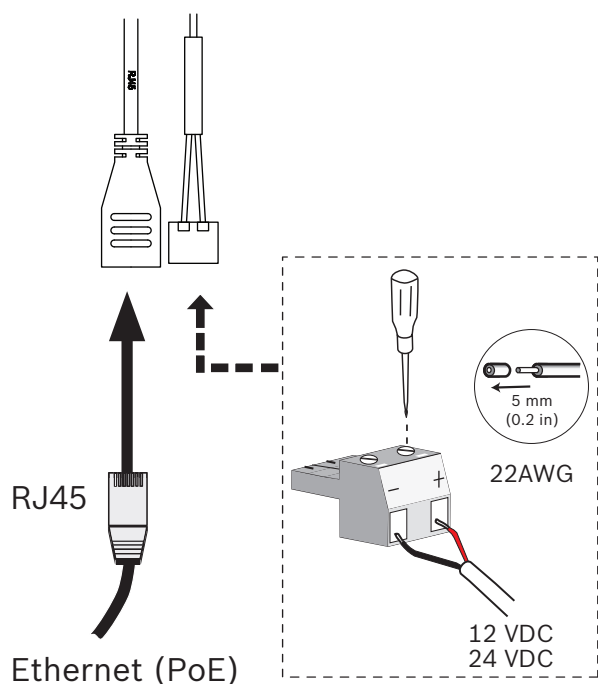


## Ethernet (PoE)

This equipment is only to be connected to PoE networks without routing to outside plant

## 4

## Adjust

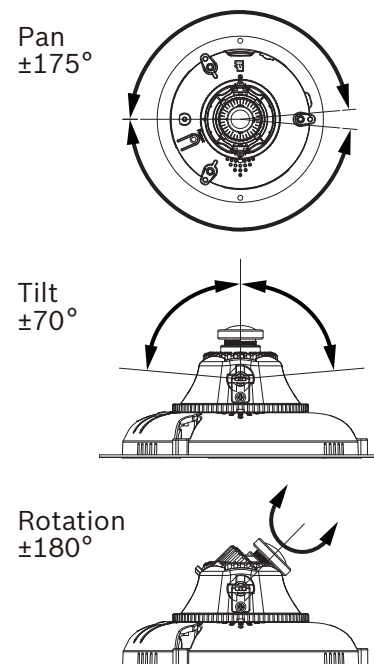


NOTE: The angle of rotation should NOT be rotated over  $180^\circ$  in clockwise and counter clockwise.

"This product is intended to be supplied by a Listed Power Unit marked "Class 2", "LPS", or "Limited Power Source" and output rated 12Vdc, 0.32A minimum; or 24Vdc, 0.16A minimum."

# 5

## Adjust

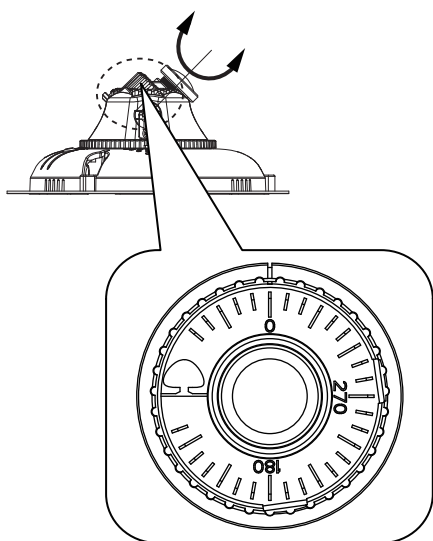

Note: To use tree mark for easy adjustment in image direction.

# 6

## Bosch Video Client



Default IP: 192.168.0.1



[http://www.boschsecurity.com/catalog\\_overview.htm](http://www.boschsecurity.com/catalog_overview.htm)

Bosch Security Systems BV, Torenallee 49, 5617BA, Eindhoven, The Netherlands



# BOSCH