

NetcamViewer Monitor supports the implementation of various functions via a simple HTTP command. This way a connection can be established between NetcamViewer Monitor and external equipment such as camera I/O's, Network I/O's or home automation equipment.

In the explanation of the API of NetcamViewer Monitor we assume that you already have the IP address or hostname.

Perform a HTTP command:

http://[IPADRES]/commands/[ACTION]/[PARAM]

Available HTTP API Commands:

ACTION	PARAM	Omschrijving	Example
hard-reset		Reset NetcamViewer to factory settings to factory settings . Accessible without a password. Only works if HDMI cable is pulled out.	http://10.10.0.25/commands/hard-reset
list-views	[FORMAT]	View all configured cameras and (multi-views). Optional the format can be specified: json, csv or xml	http://10.10.0.25/commands/list-views http://10.10.0.25/commands/list-views/xml
play	VIEW_ID[-TIME]	Start a camera or (multi-)view corresponding to the ID from the list-views overview.	Start the view with ID "5" http://10.10.0.25/commands/play/5 Start the view with ID "5" for 20 seconds. Then switch back to the current view: http://10.10.0.25/commands/play/5-20
play-sound		Plays a notification sound via HDMI / mini-jack	
play-startup-view		Starting startup-view (if set)	
stop		Stopping stream	
get-snapshot		Screenshot of the NetcamViewer Monitor display	
enable-remote-support		Enabling Remote Support function. Accessible without a password.	
disable-remote-support		Disable Remote Support function. Accessible without a password.	