

# Camera Housing

This document is an addendum to the **Camera Housing & Accessories Operating Instructions** for the AXIS HOV Housing VT and describes how to connect power to the Axis network camera installed in the outdoor housing.


Follow the instructions in the **Camera Housing & Accessories Operating Instructions** to install the Axis network camera.

Follow the instructions below to connect power to the camera:



Connect the supplied cable from the power connector in the camera housing (+\-) to the I/O connector at the back of the camera (+\-).

**Note:** Please look at the correct picture that pertains to your camera.



+\-	Color	Description
+	Red	Camera DC Power (+)
-	Black	Camera GND (-)
+	Red	Power connector DC Power (+)
-	Black	Power connector GND (-)

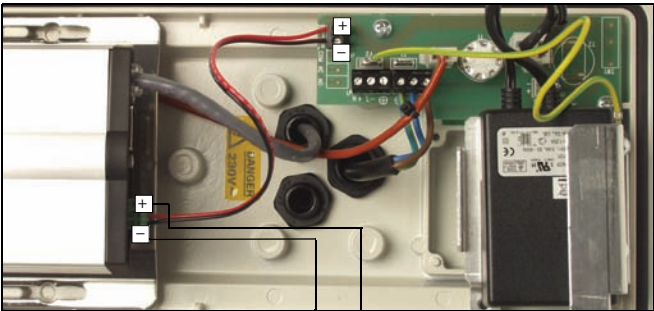


AXIS 221

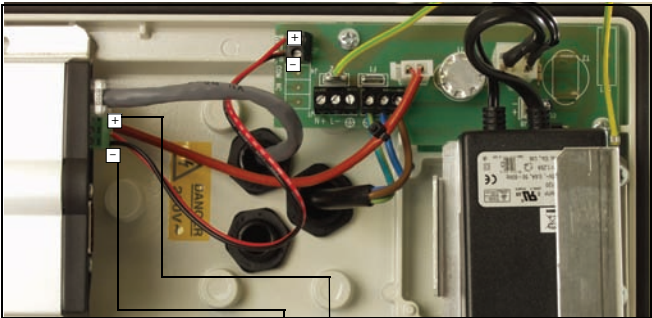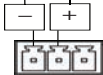

AXIS 223M

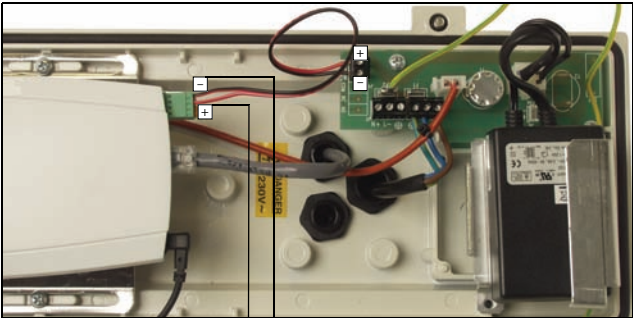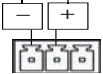

AXIS 211/211A/211W/211M

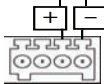


## Important!


Make sure that the + and - wires are connected correctly. If not, the camera may be damaged when power is applied.

This description applies to the following products:


Item	Part no.
AXIS HOV Power Supply VT	0217-241
AXIS HOV Housing VT	0217-231
AXIS 211 Network Camera	0198-00x
Axis 211A Network Camera	0223-00x
AXIS 211M Network Camera	0269-00x
AXIS 211W Network Camera	0270-00x
AXIS 221 Network Camera	0221-00x
Axis 223M Network Camera	0247-00x

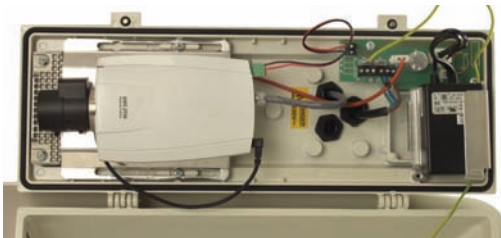

Camera housing with AXIS 211 installed

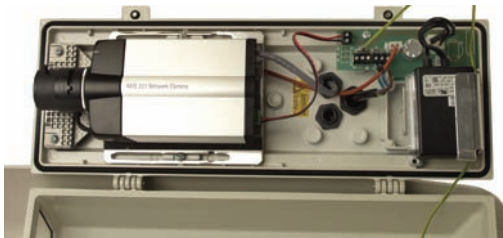

Camera housing with AXIS 221 installed

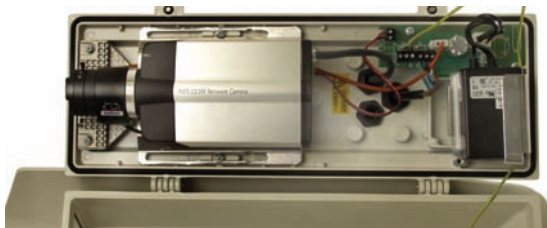

Camera housing with AXIS 223M installed



## Powering an Axis Network Camera in an AXIS HOV Housing VT

*applies to the following network cameras:*

*AXIS 211*

*AXIS 211A*

*AXIS 211M*

*AXIS 211W*

*AXIS 221*

*AXIS 223M*