

USER'S MANUAL

AXIS P33 Network Camera Series

AXIS P3343 Network Camera

AXIS P3343-V Network Camera

AXIS P3343-VE Network Camera

AXIS P3344 Network Camera

AXIS P3344-V Network Camera

AXIS P3344-VE Network Camera

AXIS P3346 Network Camera

AXIS P3346-V Network Camera

AXIS P3346-VE Network Camera

Notices

This manual is intended for administrators and users of the AXIS P33 Series, and is applicable for firmware release 5.20 and later. It includes instructions for using and managing the camera on your network. Previous experience of networking will be of use when using this product. Some knowledge of UNIX or Linux-based systems may also be beneficial, for developing shell scripts and applications. Later versions of this document will be posted to the Axis Website, as required. See also the product's online help, available via the Web-based interface. The AXIS P33 Series support ONVIF v1.0. For more information about ONVIF go to www.onvif.org For more information about enabling ONVIF go to the developers page at www.axis.com

Liability

Every care has been taken in the preparation of this manual. Please inform your local Axis office of any inaccuracies or omissions. Axis Communications AB cannot be held responsible for any technical or typographical errors and reserves the right to make changes to the product and manuals without prior notice. Axis Communications AB makes no warranty of any kind with regard to the material contained within this document, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Axis Communications AB shall not be liable nor responsible for incidental or consequential damages in connection with the furnishing, performance or use of this material.

Intellectual Property Rights

Axis AB has intellectual property rights relating to technology embodied in the product described in this document. In particular, and without limitation, these intellectual property rights may include one or more of the patents listed at <http://www.axis.com/patent.htm> and one or more additional patents or pending patent applications in the US and other countries.

This product contains licensed third-party software. See the menu item "About" in the product's user interface for more information.

This product contains source code copyright Apple Computer, Inc., under the terms of Apple Public Source License 2.0 (see <http://www.opensource.apple.com/apsl/>).

The source code is available from:
<http://developer.apple.com/darwin/projects/bonjour/>

Equipment Modifications

This equipment must be installed and used in strict accordance with the instructions given in the user documentation. This equipment contains no user-serviceable components. Unauthorized equipment changes or modifications will invalidate all applicable regulatory certifications and approvals.

Trademark Acknowledgments

Apple, Boa, Bonjour, Ethernet, Internet Explorer, Linux, Microsoft, Mozilla, Netscape Navigator, OS/2, Real, QuickTime, UNIX, Windows, WWW are registered trademarks of the respective holders. Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries. Axis Communications AB is independent of Sun Microsystems Inc.

UPnP™ is a certification mark of the UPnP™ Implementers Corporation.

Support

Should you require any technical assistance, please contact your Axis reseller. If your questions cannot be answered immediately, your reseller will forward your queries through the appropriate channels to ensure a rapid response. If you are connected to the Internet, you can:

- download user documentation and firmware updates
- find answers to resolved problems in the FAQ database. Search by product, category, or phrases
- report problems to Axis support by logging in to your private support area
- visit Axis Support at www.axis.com/techsup

Contents

AXIS P33 Series	4
Key features	5
Hardware overview	6
LED indicators	6
Unit connectors	7
Accessing the Camera	8
Access from a browser	8
Access from the internet	9
Setting the root password	9
The Live View page	10
Video Streams	12
How to stream H.264	12
Motion JPEG	12
Alternative methods of accessing the video stream	13
Accessing audio streams	14
Video & Audio	15
Video Stream	15
Stream Profiles	17
Camera Settings	17
View Areas	19
Overlay Image	20
Privacy Mask	20
Focus & Zoom	21
Audio Clips	23
Live View Config	24
PTZ	27
Preset Positions	27
Guard Tour	27
Advanced	27
Applications	28
Events	29
Event Servers	29
Event Types	29
Camera Tampering	31
Port Status	33
Recordings	34
Continuous Recording	35
System Options	36
Security	36
Date & Time	37
Network	39
Storage – Disk Management	44
LED	45
Maintenance	45
Support	46
About	47
Resetting to Factory Default Settings	47
Troubleshooting	48
Checking the Firmware	48
Upgrading the Firmware	48
Technical Specifications for AXIS P3343 Series	52
Technical Specifications for AXIS P3344 Series	55
Technical Specifications for AXIS P3346 Series	58
General performance considerations	62
Glossary of Terms	63
Index	68

AXIS P33 Series

This manual is relevant to the following network cameras:

AXIS P3343 Network Camera Series

- AXIS P3343 Network Camera
- AXIS P3343-V Network Camera
- AXIS P3343-VE Network Camera

AXIS P3344 Network Camera Series

- AXIS P3344 Network Camera
- AXIS P3344-V Network Camera
- AXIS P3344-VE Network Camera

AXIS P3346 Network Camera Series

- AXIS P3346 Network Camera
- AXIS P3346-V Network Camera
- AXIS P3346-VE Network Camera

The information in this manual applies to all these camera types except where otherwise stated.

Model	Network Camera	Features
	AXIS P3343 Network Camera Series	Resolution 800x600
	AXIS P3344 Network Camera Series	Megapixel resolution up to 1280x800
	AXIS P3346 Network Camera Series	3 Megapixel resolution up to 2048x1536
Standard	AXIS P3343 Network Camera AXIS P3344 Network Camera AXIS P3346 Network Camera	Indoor use Built-in microphone
Vandal	AXIS P3343-V Network Camera AXIS P3344-V Network Camera AXIS P3346-V Network Camera	Indoor use, vandal-resistant Built-in microphone
Vandal and Environmental casing (VE)	AXIS P3343-VE Network Camera AXIS P3344-VE Network Camera AXIS P3346-VE Network Camera	Outdoor use, vandal-resistant Equipped with fan and heater Outdoor-proof design for maximum protection (IP66 Ingress Protection rating)

The AXIS P33 Series includes high-performance network cameras for professional surveillance and remote monitoring. The discreet, vandal-resistant and outdoor-proof design of some of these cameras provides maximum protection in harsh environmental conditions. The built-in heater and fan protect against low and high temperatures respectively and help prevent the glass from misting over. Supported by the industry's largest base of video management software, the AXIS P33 Series provide the perfect solution for securing prisons, schools, parking ramps, railway stations and other facilities over the local area network or across the Internet.


The compact and cost-efficient design enables easy and flexible installation with tamper-proof mounting on wall or ceiling. It allows for versatile adjustment by panning, tilting and rotating the lens to any camera angle desired.

The built-in Power over Ethernet support enables power to the camera to be delivered via the network, eliminating the need for a power outlet and reducing installation costs. In addition, the consolidation of power gives higher reliability if connected to a central Uninterruptible Power Supply (UPS). These network cameras also offer a comprehensive set of network security features such as multi-level password protection, IP address filtering, HTTPS encryption, network authentication, and access.


Key features

- **Superior image quality**
These cameras offer superior image quality with progressive scan, providing crisp and clear images of both illuminated and dark areas. AXIS M3346 offers superb image quality in 3MP resolution and HDTV streaming in 1080p at 30 fps.
- **Easy installation**
These network cameras are easy to install. They also come with Power over Ethernet that supplies power to the camera via the network, eliminating the need for power cables, and reducing installation costs.
- **Multiple H.264, and Motion JPEG streams**
Multiple H.264 and Motion JPEG streams can be provided either in full frame rate or individually optimized for different quality needs and bandwidth constraints.
- **Intelligent video capabilities**
These network cameras offer intelligent capabilities such as enhanced video motion detection, and detection of camera tampering attempts like blocking or spray-painting. The camera also provides capacity for third party analytics modules.
- **Improved security**
These network cameras log all user access, and list currently connected users. They also provide full frame rate video over HTTPS. The vandal-resistant casing in the -V and -VE models make them safe and less vulnerable to destruction.
- **Wide temperature range operability**
These network cameras can function in temperatures ranging from -40°C to +55°C.
- **Local storage**
There is local storage to record to and play back video from an SD card.
- **Motorized zoom and focus**
The zoom and focus for these network cameras can be set remotely over the network.

Hardware overview

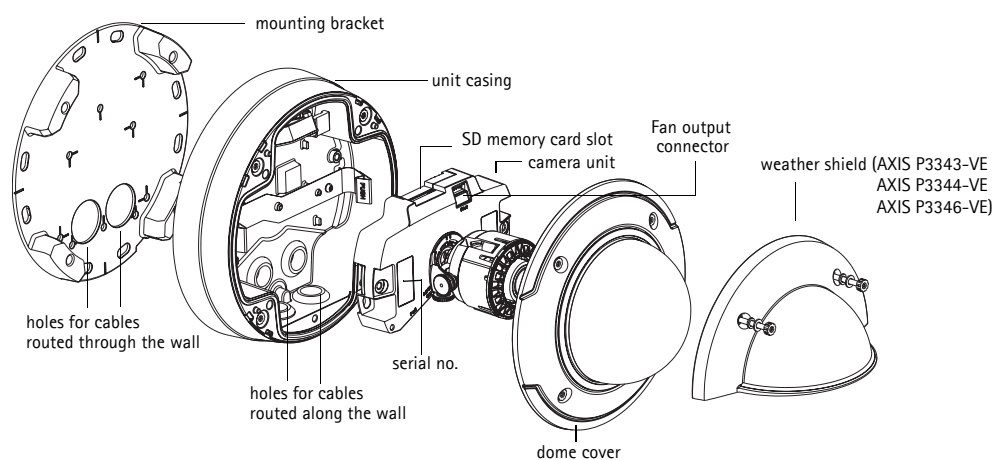

Camera unit

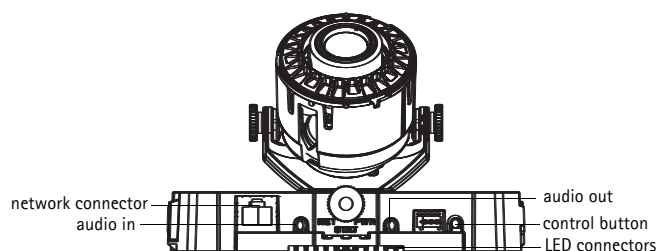

LED indicators

LED	Color	Indication
Network	Green	Steady for connection to a 100 Mbit/s network. Flashes for network activity.
	Amber	Steady for connection to 10 Mbit/s network. Flashes for network activity.
	Unlit	No network connection.
Status	Green	Steady green for normal operation. Note: The Status LED can be configured to be unlit during normal operation, or to flash only when the camera is accessed. To configure, go to Setup > System Options > LED settings . See the online help files for more information.
	Amber	Steady during startup, flashes once during reset to factory default or when restoring settings.
	Red	Slow flash for failed upgrade.
Power	Green	Normal operation.
	Amber	Flashes green/amber during firmware upgrade.

Unit connectors


Network connector - RJ-45 Ethernet connector. Supports Power over Ethernet. Using shielded cables is recommended.

Audio in - 3.5mm input for a mono microphone, or a line-in mono signal (left channel is used from a stereo signal).

Audio out - Audio output (line level) that can be connected to a public address (PA) system or an active speaker with a built-in amplifier. A pair of headphones can also be attached. A stereo connector must be used for the audio out.

SDHC memory card slot - The high capacity SD memory card can be used for local recording with removable storage.


I/O terminal connector - Used in applications for e.g. motion detection, event triggering, time lapse recording and alarm notifications. It provides the interface to:

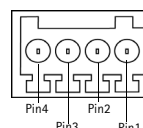

- 1 transistor output - For connecting external devices such as relays and LEDs. Connected devices can be activated by the VAPIX Application Programming Interface (API), by the output buttons on the Live View page or by an Event Type. The output will show as active (shown under Event Configuration > Port Status) if the alarm device is activated.
- 1 digital input - An alarm input for connecting devices that can toggle between an open and closed circuit, for example: PIRs, door/window contacts, and glass break detectors. When a signal is received the state changes and the input becomes active (shown under Event Configuration > Port Status).
- Auxiliary power and GND

Function	Pin	Notes	Specifications
GND	1	Ground	
3.3V DC Power	2	Can be used to power auxiliary equipment. Note: This pin can <u>only</u> be used as power out.	Max. load = 50mA
Digital Input	3	Connect to GND to activate, or leave floating (or unconnected) to deactivate.	Min. input= - 40V DC Max. input= + 40V DC
Digital Output	4	Uses an open-drain NFET transistor with the source connected to GND. If used with an external relay, a diode must be connected in parallel with the load, for protection against voltage transients.	Max. load = 100mA Max voltage = + 40V DC

The following connection diagram gives an example of how to connect an auxiliary device.

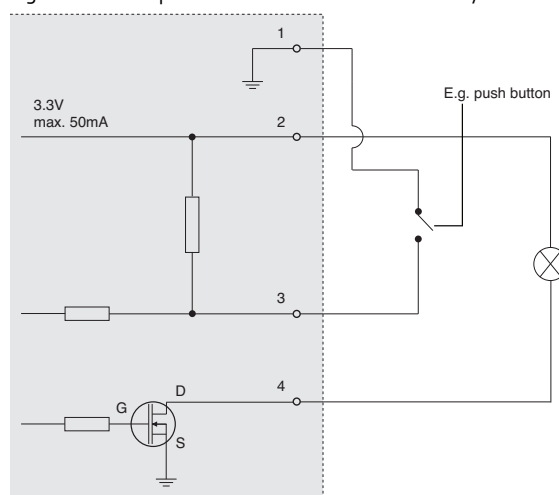

Accessing the Camera

To install this AXIS product, refer to the supplied installation guide.

The network camera can be used with most standard operating systems and browsers. The recommended browser is Microsoft Internet Explorer with Windows, Safari with Macintosh and Firefox with other operating systems. See Technical specifications starting on page 52.

Notes:


- To view streaming video in Microsoft Internet Explorer, set your browser to allow ActiveX controls and install AXIS Media Control (AMC) on your workstation.
- QuickTime™ is also supported for viewing H.264 streams.
- If your computer restricts the use of additional software components, the camera can be configured to use a Java applet for viewing Motion JPEG.
- The network camera includes one (1) H.264 decoder license for viewing video streams and (1) AAC audio license. These licenses are automatically installed with AMC. The administrator can disable the installation of the decoders to prevent installation of unlicensed copies.

Access from a browser

1. Start a browser (Internet Explorer, Firefox, Safari).
2. Enter the IP address or host name of the camera in the **Location/Address** field of your browser.
To access the camera from a Macintosh computer (Mac OSX), click on the Bonjour tab and select your AXIS product from the drop-down list (the Bonjour tab is only available in Safari).
3. If this is the first time you are accessing the camera, see *Setting the root password*, on page 9. Otherwise enter your user name and password, set by the administrator.
4. The camera's **Live View** page appears in your browser.

Note:

The layout of the **Live View** page may have been customized to specific requirements. Consequently, some of the examples and functions featured here may differ from those displayed on your own **Live View** page.

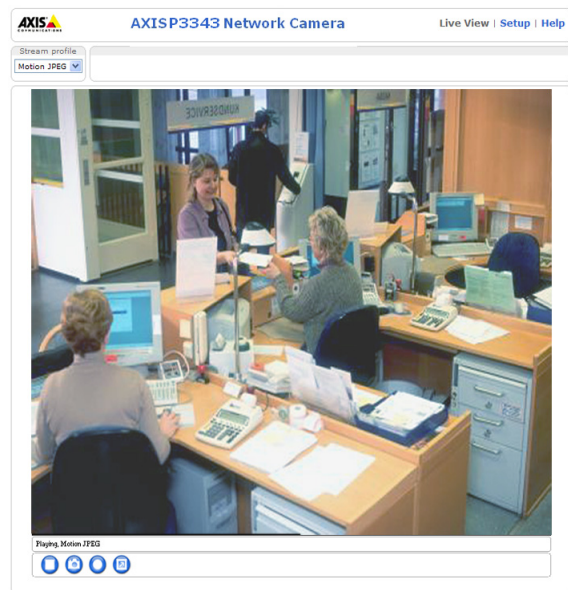

Access from the internet

Once connected, the camera is accessible on your local network (LAN). To access the camera from the Internet you must configure your broadband router to allow incoming data traffic to the camera. To do this, enable the NAT-traversal feature, which will attempt to automatically configure the router to allow access to the camera. This is enabled from **Setup > System Options > Network > TCP/IP Advanced**.


For more information, please see *NAT traversal (port mapping) for IPv4*, on page 40. See also the AXIS Internet Dynamic DNS Service at www.axiscam.net For Technical notes on this and other topics, visit the Axis Support web at www.axis.com/techsup

Setting the root password

To gain access to the product, you must set the password for the default administrator user – 'root'. This is done in the **Configure Root Password** dialog, which appears when the network camera is accessed for the first time. To prevent network eavesdropping the root password can be set via an encrypted HTTPS connection, which requires an HTTPS certificate.

Note:

HTTPS (Hypertext Transfer Protocol over SSL) is a protocol used to encrypt traffic between web browsers and servers. The HTTPS certificate ensures encrypted exchange of information.

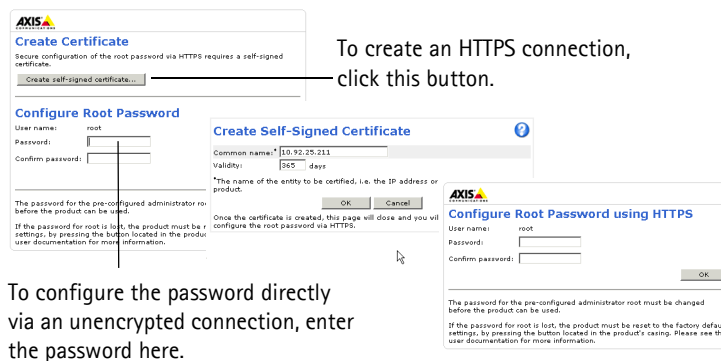

To set the password via a standard HTTP connection, enter it directly in the first dialog shown above.

To set the password via an encrypted HTTPS connection, follow these steps:

1. Click **Create self-signed certificate**.
2. Provide the requested information and click **OK**. The certificate is created and the password can now be set securely. All traffic to and from the network camera is encrypted from this point on.
3. Enter a password and then re-enter to confirm the spelling. Click **OK**. The password has now been configured.


Notes:

- The default administrator user name 'root' is permanent and cannot be deleted.
- If the password for root is lost, the camera must be reset to the factory default settings. See page 47.
- If prompted, click **Yes** to install AXIS Media Control, which allows viewing of the video stream in Internet Explorer. You will need administrator rights on the computer to do this. If using Windows 7 or Windows Vista, you must also run Internet Explorer as administrator; right-click the Internet Explorer icon and select **Run as administrator**.

Configure capture mode

Capture mode defines how image data is taken from the image sensor with respect to resolution and frame rate, and is set the first time the camera is accessed. Select the desired capture mode from the drop-down list and click **OK**. See also *Capture mode*, on page 17.


AXIS P3346

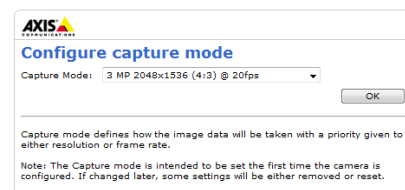


The Live View page

How you customize the Live View page determines which buttons are visible. Not all the buttons described below will show up unless configured to do so.

General controls



View size – Click to scale the image down to 800 pixels wide or to full scale. Only available in MJPEG.

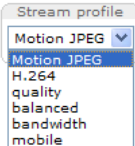


The **Stream Profile** drop-down list allows you to select a customized or pre-programmed stream profile in the Live View page. Stream profiles are configured under **Video > Stream Profiles**.



The **Action buttons** can trigger an event directly from the Live View page. These are enabled under **Setup > Live View Config > Layout**.



The **Snapshot** button saves a snapshot of the video image on display. Right-click on the video image to save it in JPEG format on your computer. This button is primarily intended for use when the AMC viewer toolbar is not available.



Audio clip – Audio clips can be played manually from the Live View page. Select the audio clip from the drop-down list and click the **Play** button.



The **Fan** and **Heater** buttons help enable the fan and heater for a specified time. These buttons are enabled from Live View **Layout**. These are only available in the AXIS P3343-VE, AXIS P3344-VE and AXIS P3346-VE network cameras.

AXIS Media Control toolbar

The AMC viewer toolbar (AXIS Media Control) is available in Microsoft Internet Explorer only. See *AXIS Media Control (AMC)*, on page 13 for more information. AMC displays the following buttons:



The **Play** button connects to the Axis product and starts playing a media stream.



The **Stop** button stops the video stream.



The **Snapshot** button takes a snapshot of the current image. You can specify the location where the image is saved by using the AXIS Media Control (AMC).



Click the **View Full Screen** button and the video image will fill the entire screen. Press **Esc** (Escape) on the computer keyboard to cancel full screen view.



The **Record** button is used to record the current video stream. The location where the recording is saved can be specified using the AXIS Media Control toolbar.


Pan/Tilt/Zoom controls



Click the **Center** mode button and click on a position in the image to center the camera view on that position.



Click the **Emulate joystick** mode button and click in the image to move the camera view in the direction of the mouse pointer.



TILT

Pan and Tilt bars – Click a position directly on the bar to steer the camera view directly to the new position in one smooth movement or click on the arrows at the ends of the bars to steer the camera in steps.

Zoom bar – Click a position directly on the zoom bar to zoom all the way to the new position in one movement or click the arrows at the ends of the bar to zoom in steps.



Video Streams

The network camera provides several image and video stream formats. Your requirements and the properties of your network will determine the type you use.

The **Live View** page in the network camera provides access to H.264, and Motion JPEG video streams, and to the list of available stream profiles. Other applications and clients can also access these video streams/images directly, without going via the **Live View** page.

How to stream H.264

This video compression standard makes good use of bandwidth, and can provide high quality video streams at less than 1 Mbit/s.

Deciding the combination of protocols and methods to use depends on your viewing requirements, and on the properties of your network. The available options in AMC are:

Unicast RTP	This unicast method (RTP over UDP) should be your first consideration for live unicast video, especially when it is important to always have an up-to-date video stream, even if some images are dropped.	Unicasting is used for video streaming, so that there is no video traffic on the network until a client connects and requests the stream. Note that there are a maximum of 20 simultaneous unicast connections.
RTP over RTSP	This unicast method (RTP tunneled over RTSP) is useful as it is relatively simple to configure firewalls to allow RTSP traffic.	
RTP over RTSP over HTTP	This unicast method can be used to traverse firewalls. Firewalls are commonly configured to allow the HTTP protocol, thus allowing RTP to be tunneled.	
Multicast RTP	This method (RTP over UDP) should be used for live multicast video. The video stream is always up-to-date, even if some images are dropped. Multicasting provides the most efficient usage of bandwidth when there are large numbers of clients viewing simultaneously. A multicast broadcast cannot however, pass a network router unless the router is configured to allow this. It is not possible to multicast over the Internet, for example. Note also that all multicast viewers count as one unicast viewer.	

AMC negotiates with the camera to determine the transport protocol to use in the order listed above. This order can be changed and the options disabled, to suit specific requirements.

Important!

H.264 is a licensed technology. The network camera includes one viewing client license for each technology. Installing additional unlicensed copies of the viewing client is prohibited. To purchase additional licenses, contact your Axis reseller.

Motion JPEG

This format uses standard JPEG still images for the video stream. These images are then displayed and updated at a rate sufficient to create a stream that shows constantly updated motion.

The Motion JPEG stream uses considerable amounts of bandwidth, but provides excellent image quality and access to every image contained in the stream. The recommended method of accessing Motion JPEG live video from the network camera is to use the AXIS Media Control in Internet Explorer in Windows.

AXIS Media Control (AMC)

AXIS Media Control (AMC) in Microsoft Internet Explorer in Windows is the recommended method of accessing live video from the network camera.

The AMC control panel can be used to configure various video and audio settings. Please see the AMC user manual included in the tool for more information.

The AMC control panel is automatically installed on first use, after which it can be configured. Open the AMC Control Panel from:

- Windows Control Panel (from the Start menu)
- Alternatively, right-click the video image in Internet Explorer and click **Settings** to access the AMC window.


Alternative methods of accessing the video stream

You can also access video/images from the network camera in the following ways:

- Motion JPEG server push (if supported by the client, Firefox, for example). This option maintains an open HTTP connection to the browser and sends data as and when required, for as long as required.
- Still JPEG images in a browser. Enter the path - `http://<ip>/axis-cgi/jpg/image.cgi`
- Windows Media Player. AMC and the H.264 viewing client need to be installed. The paths that can be used are listed below in the order of preference:
 - Unicast via RTP: `axrtpu://<ip>/axis-media/media.amp?videocodec=<codec>`
 - Unicast via RTSP: `axrtsp://<ip>/axis-media/media.amp?videocodec=<codec>`
 - Unicast via RTSP, tunneled via HTTP: `axrtsphhttp://<ip>/axis-media/media.amp?videocodec=<codec>`
 - Multicast: `axrtmp://<ip>/axis-media/media.amp?videocodec=<codec>`
- To access the video stream from **QuickTime™** the following paths can be used:
 - `rtsp://<ip>/axis-media/media.amp?videocodec=<codec>`
 - `rtsp://<ip>/axis-media/media.3gp?videocodec=<codec>`

Notes:

- The network camera supports QuickTime 6.5.1 and later.
- QuickTime adds latency to the video stream (up to 3 seconds).
- It may be possible to use other players to view the H.264 stream using the paths above, although Axis does not guarantee this.
- <ip> = IP address
- <codec> = h264. The default codec is H.264.

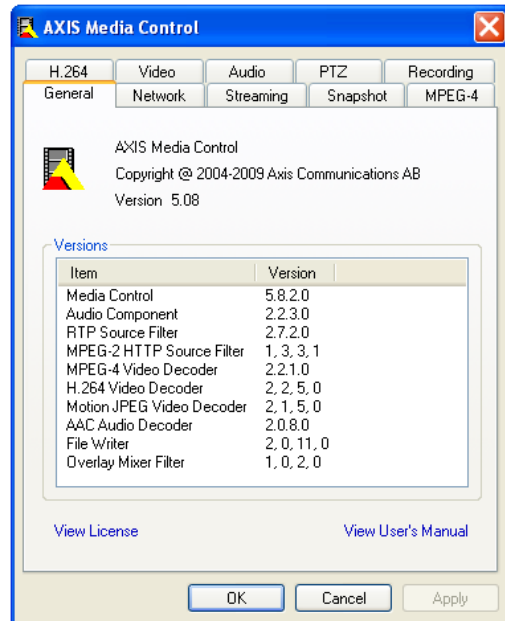

Accessing audio streams

The Live View page provides access to audio through AXIS Media Control; in addition audio can be accessed in the following ways:

VAPIX®

Audio can be accessed through the VAPIX® Application Programming Interface (API). For more information visit <http://www.axis.com/techsup>

QuickTime and Windows Media Player

Simplex audio can be accessed via QuickTime and Windows Media Player by using the same paths as for video streams (see above). QuickTime supports G.711 and AAC audio encoding.

Java applet

The Java applet supports simplex audio with G.711 encoding.

Video & Audio

This section describes how to configure the camera, and is intended for product Administrators, who have unrestricted access to all settings; and Operators, who have access to the settings for Basic Setup, Video and Events.

You can configure the camera by clicking **Setup** in the top right-hand corner of the **Live View** page. Click  on this page to access the online help that explains the configuration menus in the web interface.

Video Stream

The video stream settings appear under four different tabs:


- Image
- Audio
- H.264
- MJPEG

Image

Image Appearance

Use these settings to modify the image resolution and compression, or to rotate the image. Setting the compression level affects the image quality and the amount of bandwidth required; the lower the compression, the higher the image quality with higher bandwidth requirements.

See the online help  for more information.

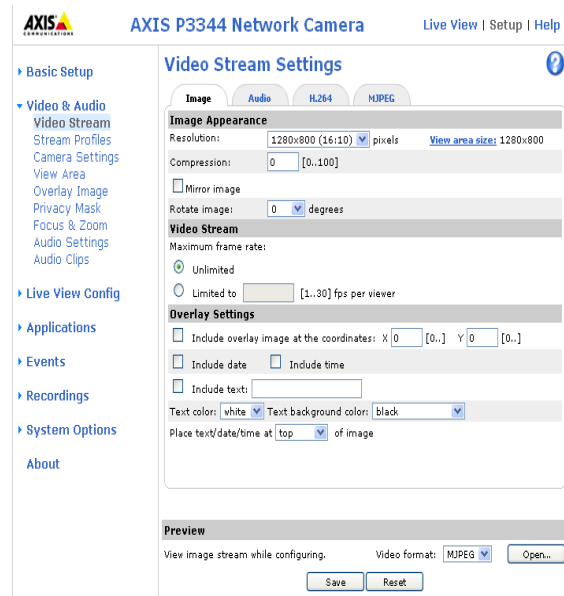

Capture mode – defines how image data is taken from the image sensor prioritizing either resolution or frame rate. The capture mode is configured the first time the camera is accessed (see page 8) but can be re-configured later, see.

View area size – Shows the size of the view area set under **View Areas**, see *View Areas*, on page 19.

Mirroring – Mirroring is the horizontal flipping of an image, that gives you another image perspective. This is a useful function when you need a direct view of the image, for example, in ATMs and door phones.

Video Stream

To avoid bandwidth problems on the network, the **frame rate** allowed to each viewer can be limited. Select the **Unlimited** radio button option to allow the highest available frame rate; or select the **Limited to** radio button option and enter a value (1–30) fps in the field.


Overlay Settings

Use these settings to include text, date, and time as overlay. Click  for information on available options.

Preview

For a preview of the image before saving, select the **Video format** and click **Open....** When satisfied with the settings, click **Save**.

Text,
date & time
overlay

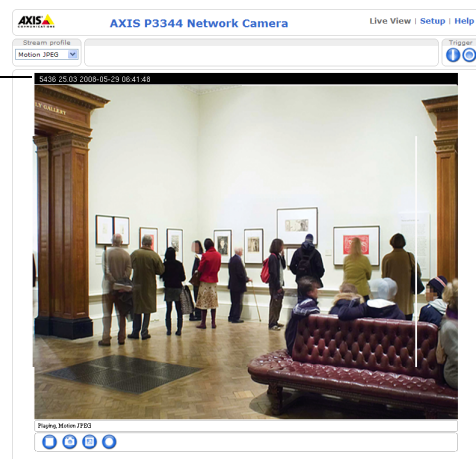

Audio

Enable Audio

Check the **Enable audio** box option to enable the audio functionality.

Note: Audio support must be also enabled under **System Options > Security**

The settings defined under **Audio Settings** are displayed under **Current Audio Settings**.

H.264

GOV Settings

The GOV structure describes the composition of the video stream; setting the GOV-length to a higher value saves considerably on bandwidth but may have an adverse effect on image quality.

Bit Rate Control

The bit rate can be set as **Variable bit rate (VBR)** or **Constant bit rate (CBR)**. VBR adjusts the bit rate according to image complexity, and thus uses a lot of bandwidth for a lot of activity in the image, and less when the monitored area is quiet.

When using CBR you can set a fixed Target bit rate, which will ensure that the level of bandwidth consumed is predictable.

As the bit rate would usually need to increase for increased image activity, but cannot when CBR is selected, the frame rate and image quality will both be affected negatively. To go some of the way towards compensating for this, it is possible to prioritize either the frame rate or the image quality whenever the bit rate would normally need to be increased. Not setting a **Priority** means the frame rate and image quality will be affected approximately equally.

MJPEG

Frame Size Control


In some situations the image size may be large due to low light or complex scenery. Adjusting the maximum frame size is a way of controlling the bandwidth and storage used by the MJPEG video stream in these situations. Leaving the frame size as **Unlimited** will provide consistently good image quality at the expense of increased bandwidth and storage usage during low light. Limiting the frame size will prevent excessive bandwidth and storage usage, but image quality will suffer. To prevent increase in bandwidth and storage usage, the maximum frame size should be set to an optimal amount.

Note: The maximum frame size allowed increases compression in order to maintain a low frame size starting at the compression value set under **Image settings > Image Appearance > Compression**. When compression is 100, the image cannot be made smaller. You may also need to adjust the Resolution setting if a smaller frame size is needed.

Stream Profiles

There are four pre-programmed stream profiles available for quick set-up. These settings can be adjusted and new customized profiles can be created. Each profile has a descriptive name, describing its use and purpose. The profiles can be accessed from the Live View page.

- To add a new stream profile, click **Add...** in the **Stream Profile List** page. The **Stream Profile Settings** dialog appears.
- Choose a **Profile name** and enter a description for your profile.
- Choose the form of **Video encoding** you wish to use from the drop-down list:
 - **H.264** – Also known as MPEG-4 Part 10. This is the new generation compression standard for digital video. This function offers higher video resolution than Motion JPEG or MPEG-4 at the same bit rate and bandwidth, or the same quality video at a lower bit rate.
 - **Motion JPEG** – Delivers a high quality video stream, from which individual images can be extracted and saved.
- Select **Copy...** from the **Stream Profile List** page to copy an existing stream profile to your system and rename it.
- Click **Modify** to modify an existing stream profile based on the light situation and motion to be captured by your camera. See the **Stream Profile Settings** dialog that opens up for more information.
- Highlight the stream profile you wish to remove, then click **Remove** to remove it from the list.

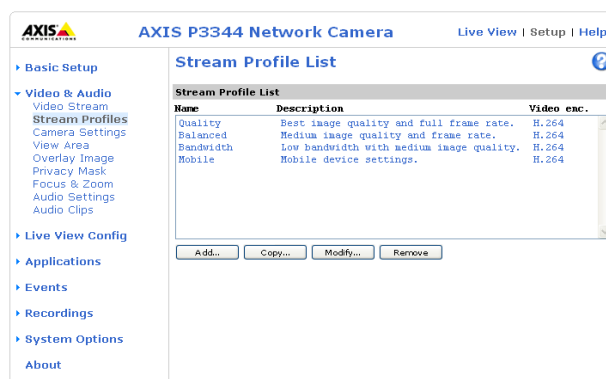

Camera Settings

This page provides access to the advanced image settings for the network camera.

Capture mode

Capture mode defines how image data is taken from the image sensor prioritizing either frame rate or resolution. The capture mode is set the first time the camera is accessed, see *Configure capture mode*, on page 9.

Capture modes for AXIS P3346:

- 3 MP (4:3 format) @20 fps
- HDTV 1080p (16:9 format) @30 fps
- 2 MP (4:3 format) @30 fps

If the capture mode setting is changed, most other settings, for example view areas, motion detection windows and events, will be removed or reset. Stop all video streams before you change the capture mode.

View Areas


Check the box **Enable View Areas** to enable the camera's View areas and digital PTZ functionality.

Image Appearance

Color level – Select an appropriate level by entering a value in the range 0-100. Lower values mean less color saturation, while the value 100 gives maximum color saturation.

Brightness – Image brightness can be adjusted in the range 0-100; a higher value produces a brighter image.

Sharpness – Controls the amount of sharpening applied to the image. A sharper image might increase image noise especially in low light conditions. A lower setting reduces image noise, but the image would be less sharp.

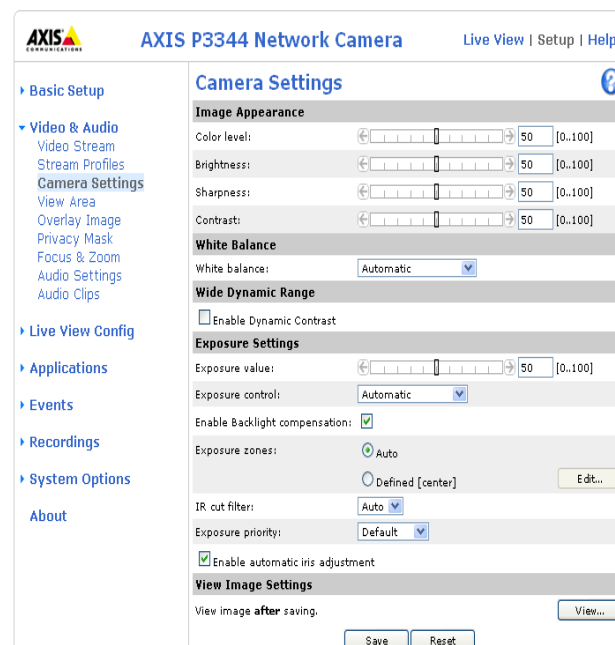

Contrast – Adjust the contrast of the image by raising or lowering the value in this field.

White balance

This is used to compensate for the different colors present in different light sources, to make the colors in the image appear the same. The network camera can be set to automatically identify the light source and compensate for its color. Alternatively, the type of light source can be manually selected from the drop-down list. See the online help files [?](#) for a description of each available setting.

Wide Dynamic Range

Wide dynamic range improves the exposure when there is a considerable contrast between light and dark areas in an image.

Note: Wide dynamic range is only possible when the Exposure control setting is set to Automatic.

Exposure Settings

Configure the exposure settings to suit the image quality requirements in relation to lighting, frame rate and bandwidth considerations.

Exposure value – Use this slider to fine tune the exposure. Increasing the exposure will improve image quality at the expense of the total frame rate. There may also be an increase in motion blur.

Exposure control – Set to **Automatic** for optimal exposure settings automatically, for example brightness and noise. Flicker-free 50 or 60 Hz is used to remove flicker which can be caused by fluorescent and other light sources. The **Hold current** option locks the current exposure settings.

Enable Backlight compensation – Backlight compensation makes the subject appear clearer when the image background is too bright, or the subject too dark.

Exposure zones – This setting determines which part of the image is used to calculate the exposure. The **Auto** setting can be used in most situations, but for particular requirements, select **Defined** and click the **Edit** button to open the **Exposure Windows** dialog to custom define the exposure zone.

IR cut filter – Set this filter to **Off** to allow the camera to 'see' infrared light, making the image clearer in low light conditions, e.g. at night or if using an infrared lamp. If set to **Auto**, the camera will automatically switch between IR cut filter On and Off, according to the current lighting conditions. Note that if this IR cut filter is set to **Off**, the image is in black and white.

Exposure priority – This defines the balance between image quality and the frame rate. When **Motion** is prioritized, motion blur is minimized, but the image quality may be reduced with a higher frame rate. A prioritized **Low noise** will provide better image quality with a lower frame rate.

Shutter – A smaller value means less motion blur, but requires a well lit scene. A larger value will allow more light in the camera so that even a low lit scene can produce a good image, but at the expense of increased motion blur.

Gain – A lower value means less noise; in dark situations this can lead to a very dark image. A larger value means more amplification making it possible to observe a dark scene, but with increased noise. When **Motion** is prioritized the shutter time is kept as low as possible. When **Low noise** is prioritized the gain is kept as low as possible. Setting min/max to the same values is equivalent to setting a fixed value.

Enable automatic iris adjustment – This should always be set to Enabled, except during focusing, or when using a fixed iris lens.

Iris adjustment – Set the preferred F-value, with this slide bar. When the **Enable automatic iris adjustment** option is enabled, the precise iris will use this value as long as light conditions are favorable for the setting; otherwise it will adjust itself to the best iris setting. If the automatic iris adjustment is NOT enabled, the precise iris will lock on this setting regardless of light conditions.

The number scale represents the degree to which the iris is open. When the scale is set at 0 the iris opens to the extent allowed. At the setting 100 the iris is closed as much as allowed. The default setting is 50. The actual F-value is shown under the Iris adjustment bar.

View Image Settings

Save the settings and click **View...** to view the video stream with the current configuration.

View Areas

When setting up a view area it is recommended that video stream resolution be the same size as or smaller than the view area size. Setting the video stream resolution larger than the view area size implies digitally scaled up video after sensor capture, requiring more bandwidth without adding image information. AXIS P3343/ AXIS P3344 allows for one view area; for AXIS P3346 you are allowed to set up a total of 8.

Add a View Area

To add a new view area:

1. Click **Add**. The new view area appears under Selected view area.
2. Enter a descriptive name in the **Name** text field.
3. Select an aspect ratio and a video stream resolution. If the **Snap to video stream resolutions** box option is selected, the view area is automatically resized to equal the size of the video stream resolution.
4. Use your mouse to move and resize the view area. Deselect the **Snap to video stream resolutions** box option to allow a view area size that differs from available video stream resolutions.
5. Check **Enable PTZ** to enable digital PTZ for this view area.
6. Click **Save** to save the settings, or click **Reset** to revert to the previous settings.

To modify a view area, select the view area in the list and click the **Modify...** button. Use your mouse to size and position the view area and change settings as needed. Click **Save**.

To remove a view area, select the view area and click **Remove**.

View area

Aspect ratio – is a ratio of width to height in images, 4:3 is a common in television screens and computer monitors while HDTV uses 16:9. Select the aspect ratio for the view area.

Video stream resolution – This drop-down list gives the available video resolutions for the view area, depending on the aspect ratio chosen.

View area size – Shows the size of the view area.

Snap to video stream resolutions – Check this box to automatically size the view area to the same size as the video stream resolution.

Enable PTZ – Check this box to enable PTZ in the view area.

Overlay Image

An overlay image is a static image superimposed over the video image. An overlay can be used to provide extra information, or to mask a part of the video image.

To use an overlay image, it must be selected from the drop-down list of available images. The overlay (a logo, for example) is then displayed in the video image.

To use your own image, first upload it to the Network Camera. To upload enter the name of the file in the field provided, or click the **Browse** button, locate the file and click the **Upload** button.



Once your own image has been uploaded it will be available for selection from the drop-down list. Click **Save** after selecting the image.


Privacy Mask

Privacy masks are up to three configurable areas of solid color that allow concealment of parts of the image that are not to be viewed. Privacy masks cannot be bypassed via the VAPIX® Application Programming Interface (API).


The **Privacy Mask List** shows all the masks that are currently configured in the Network Camera and indicates if they are enabled. To define a new mask:

1. Click **Add**. A rectangle appears on the image.
2. Place the rectangle over the desired area to conceal.
3. To resize, click and pull the bottom right-hand corner.
4. Choose a color, black, white, gray or red for the box from the **Privacy mask color** drop-down list.
5. Enter a descriptive name in the **Mask name** field.
6. Click **Save**.

To edit a privacy mask, select and reshape the mask, move or change color as needed. Refer to the online Help  for more information.

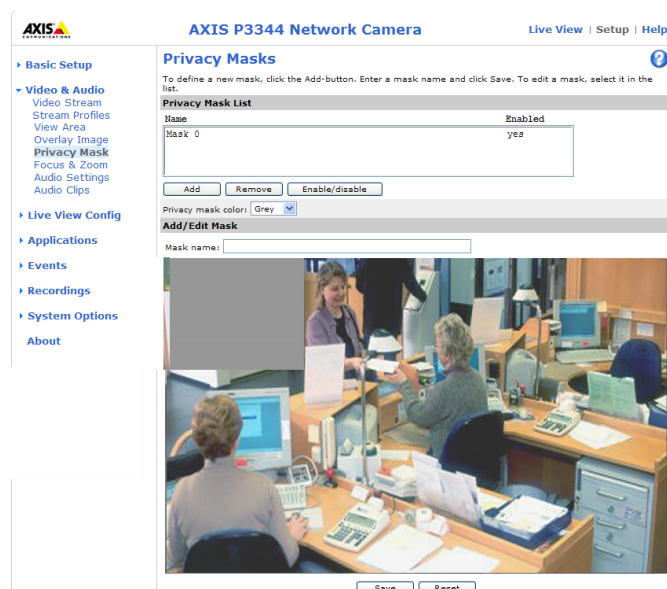

Focus & Zoom

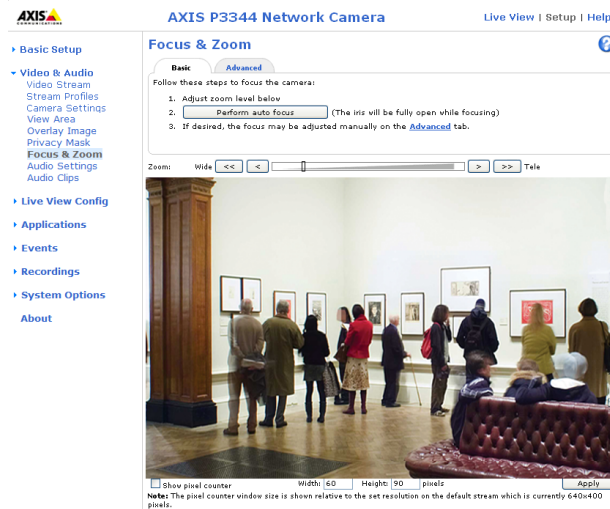

Through this page you can focus and zoom the Network Camera from the web interface. It is recommended that you only use this feature during installation or re-installation of the camera. See the Installation Guide supplied with the product.

An auto focus function is available under the **Basic** tab. At the bottom of the preview is a pixel counter, which is useful where the image needs to be a certain size; face recognition is a good example. Enable the tool to ensure that an area in the image has the required number of pixels, such as a doorway where people's faces should be recognizable.

Under the **Advanced** tab fine-tune the focus or run a full range scan to find the optimal focus setting.

Warning: The lens is only guaranteed to function for up to 1000 focus/zoom movements.


Basic

Use the Zoom slide bar to zoom in on a desired area to focus. Changing the zoom will move the focus, which must be adjusted after changing the zoom. If further adjustments are required go to the **Advanced** tab.

Advanced (AXIS P3343, AXIS P3344)

These tools help to achieve the optimal focus position. The **Advanced** focus tab can also be used to adjust the zoom. While adjusting the focus manually through the slider, always open the iris first by clicking the **Open iris** button and enable it when finished by clicking the **Enable iris** button. (The iris is opened to get a shorter focal depth.) Adjust the size and position of the Focus window as required in the preview.

It is recommended to try the **Fine-tune focus automatically** button first and if you're not satisfied with the results, try the **Full range focus scan**. Click **Full range focus scan** to calculate the focus positions within the focus window. The focus position bar is transformed to a graph where peaks indicate the best focus positions. Click in the graph to set focus to that position. Note that the scan could take several minutes.

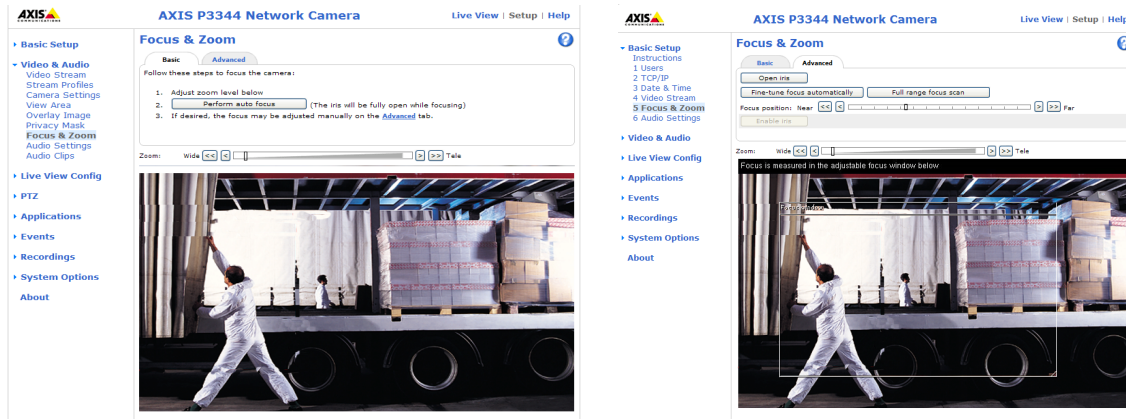

Tip!

It could be faster to find the focus with a manual sweep, and a new autofocus. Use the scan as the last resort.

Open iris – Use this button to open the iris before focusing. Keep enabled all other times.

Focus position bar – Click on the bar to focus on a desired location. The buttons < and > move the focus position one step in either direction. The buttons << and >> move the focus position in multiple steps in either direction.

When satisfied with the focus position click the **Enable iris** button.

Advanced (AXIS P3346)

Click on the **Focus position bar** to focus on a desired location. The buttons < and > move the focus position one step in either direction. The buttons << and >> move the focus position in multiple steps in either direction.

For more information on Focus and Zoom, click  to view the online help.

Audio Settings

Audio Channels

The **Audio mode** that you select determines the type of audio transmission. The available options are:

Full duplex – Simultaneous two-way audio allowing you to transmit and receive audio (talk and listen) at the same time.

Note: There is no echo cancellation; if feedback loops appear, try moving the microphone or the speaker.

Half duplex – Non-simultaneous two-way audio. Half-duplex mode sends and receives audio in both directions, but only in one direction at a time.

Simplex – Network Camera speaker only – The speaker connected to the network camera will play audio transmitted from any web client. This could be used, for example, to provide spoken instructions to a person seen in the network camera. This mode requires you to use the push-to-talk button.

Simplex – Network Camera microphone only – transmits audio from the network camera to any web client. This can be used in remote monitoring, and web attractions, to provide live audio from a monitored situation.

Audio Input

Source – Select **Microphone** for an external microphone or **Line** for a Line in device, e.g. an audio mixer for multiple microphones, or a microphone with a built-in amplifier.

Enable microphone power – Microphone power should only be used with electric microphones that have no battery and when using the internal microphone. This setting should not be enabled when using a dynamic or battery powered microphone.

Input gain – Volume control of the audio input.

Encoding – Select the digital audio encoding format to use.

Sample rate – Select the required sample rate (the number of times per second the sound is sampled). The higher the sample rate (and the better the audio quality), the greater would be the bandwidth required.

Bit rate – Depending on the selected encoding, set the required bit rate (audio quality). The higher the bit rate, the greater the bandwidth required.

Alarm level – Event types in the network camera can be set to use this level as a trigger. Each individual event type can be configured to trigger if the sound level rises above or falls below the set value. The alarm level can be set in the range 0-100%, where 0% is the most sensitive and 100% the least sensitive.

Audio Output

Output gain – Volume control of the line audio output. The output can be used with high impedance headphones or connected to another amplifier with speakers.

Click **Save** to save your settings, or click **Reset** to return to the previous settings.

Audio Clips

Audio clips can be played when an event occurs or manually from the **Live View** page. Audio clips are created either by recording sound using the camera's microphone or by uploading a sound file to the camera. Audio clips that have been added to the network camera are listed in the **Audio Clip List** page. You can add new clips, play, download, modify and remove clips. Refer to the online help  for further information.

Live View Config

AXIS P3346 Network Camera

Live View | Setup | Help

- Basic Setup
- Video & Audio
- Live View Config
 - Layout
- PTZ
- Applications
- Events
- Recordings
- System Options
- About

Live View Layout

Stream Profile

Stream profile: Motion JPEG

☒ Show stream profile selection

Default Viewer

Windows Internet Explorer: AMC (ActiveX)

Other Browsers: Server push

Note: QuickTime is only used with H.264. Motion JPEG will be shown with AMC in Windows Internet Explorer and with server push in other browsers.

Viewer Settings

☒ Show viewer toolbar

☒ Enable H.264 decoder installation

☒ Show crosshair in PTZ joystick mode*

☐ Use PTZ joystick mode as default*

☐ Enable recording button

*Not applicable to AMC (ActiveX).

Action Buttons

☐ Show manual trigger button for View Area 1

☐ Show snapshot button

☐ Show audio clip section

User Defined Links

☐ Show custom link 1	Use as: ☒ cgi link ☐ web link
Name: Custom link 1	URL: http://
☐ Show custom link 2	Use as: ☒ cgi link ☐ web link
Name: Custom link 2	URL: http://
☐ Show custom link 3	Use as: ☒ cgi link ☐ web link
Name: Custom link 3	URL: http://
☐ Show custom link 4	Use as: ☒ cgi link ☐ web link
Name: Custom link 4	URL: http://

Output Buttons

Output 1: -----

Save Reset

Live View Layout

Stream Profile

From the **Stream Profile** drop-down list, select the stream profile to use for the Live View page. Standard stream profiles are listed as well as the ones created under **Video > Stream Profiles**. See the online help files [?](#) on this page for more information

Default Viewer

From the drop-down lists, select the default method for viewing video images for your browser. The camera attempts to show the video images in the selected video format and viewer. If this is not possible, the camera overrides the settings and selects the best available combination.

Browser	Viewer	Description
Windows Internet Explorer	AMC	Recommended viewer in Windows Internet Explorer (H.264/Motion JPEG).
	QuickTime	H.264
	Java applet	A slower imaging alternative to AMC. Requires one of the following installed on the client: - JVM (J2SE) 1.4.2 or higher - JRE (J2SE) 5.0 or higher
	Still image	Displays still images only. Hit the Refresh button in your browser to view a new image.
Other browsers	Server Push	Recommended viewer for other browsers (Motion JPEG).
	QuickTime	H.264
	Java applet	A slower imaging alternative to Server Push (Motion JPEG only).
	Still image	Displays still images only. Hit the Refresh button in your browser to view a new image.

Viewer Settings

Check the **Show viewer toolbar** box option to display the AXIS Media Control (AMC) or the QuickTime viewer toolbar under the video image in your browser.

The administrator can disable the installation of the **H.264** decoder included with AMC. This is used to prevent the installation of unlicensed copies. Further decoder licenses can be purchased from your Axis dealer.

The **Show crosshair in PTZ joystick mode** option enables a cross that indicates the center of the image when viewing the video stream in PTZ joystick mode.

Enable the **Use PTZ joystick mode as default** option to set the PTZ mode to joystick. The mode can be changed temporarily on the PTZ Control Panel, but will default to joystick if this is selected.

Check the **Enable recording button** option to enable recording from the Live View page.

Action Buttons

The **Show manual trigger button** option manually triggers and stops an event from the Live View page. See *Events*, on page 29. In AXIS P3346 a manual trigger button can be shown for each view area.

Check the **Show snapshot button** option to save a snapshot from the video stream. This button is mainly intended for use with browsers other than Internet Explorer, or when not using AXIS Media Control (AMC) to view the video stream. AMC for Internet Explorer provides its own snapshot button.

Play audio clip enabled – Enabling the display of the **Audio clip** drop-down box and **Play** button in the Live View page allows users to play a pre-recorded audio clip from the camera. Go to **Video & Audio > Audio Clips** to work with the audio clips.

When you enable the **Show fan** and **Show heater** buttons, they appear in the **Live View** page. Click on these buttons to activate the fan or heater for five minutes (only available in the AXIS P3343-VE, AXIS P3344-VE and AXIS P3346-VE network cameras).

User Defined Links


User defined links can be CGI links or web links. Once configured, the link(s) appear in the **Live View** page.

To set up a web link, select the **Use as: web link** radio button, enter a descriptive name and enter the URL in the provided field. Click **Save** and the link appears in the **Live View** page.

User defined CGI links can be used to issue VAPIX API requests.

For more information on the VAPIX® Application Programming Interface (API), see the [Support/Network Video/Developer](http://www.axis.com) pages on the Axis Web site at <http://www.axis.com>

Please use the online help files  for more information.

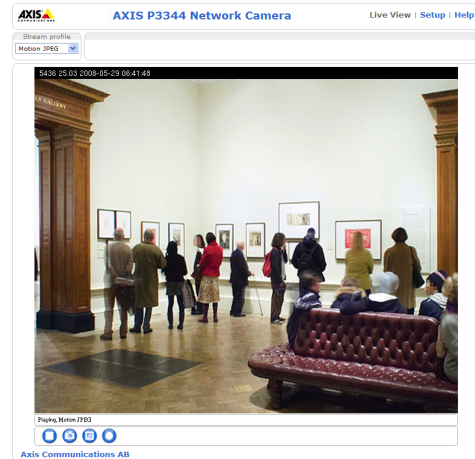

User defined Link

Output Buttons

An output on the Network Camera can be controlled directly from the **Live View** page, by enabling the display of output buttons.

To enable this button, select the type of control to use for the port. This can be set as **Pulse**, where clicking the single button activates the port for the defined period, or as **Active/Inactive**, which displays two buttons, one for each action. The selected type automatically displays the correct button(s) on the **Live View** page.

The pulse time can be set as short as 1/100 second, and as long as 60 seconds.

PTZ

To enable digital PTZ, and PTZ controls in Live View go to **Video & Audio > View Area** and select the **Enable PTZ** check box option. Click **Save**. The PTZ menu now appears.

Preset Positions

A preset position is a pre-defined camera view that can quickly and easily be viewed, simply by selecting the preset's name. To create a preset position:

1. Using the Pan, Tilt and Zoom (PTZ) controls, move the camera view to the required position.
2. When satisfied with the camera's view, enter a descriptive name for the position in the **Current position** field.
3. If required, check the **Use current position as Home** box option (AXIS P3343/AXIS P3344).
4. Click **Add**. This position is then saved as a preset position in the camera. The position can be assumed at any time, by selecting it from the drop-down list of available positions. Presets can be selected in from the **Live View** window, from **Events**, from **Guard Tour**, and in **Sequence** mode.

You can set a position as the **Home** position, which is readily accessible by clicking on the **Home** button in both the **Preset Positions** window and the **Live View** window. The position's name will have (H) added after it. For example, Office Entrance (H).

You can return the network camera to the overview image after a set time of viewing a preset position. The interval is configurable from 0 seconds (i.e. disabled) to 300 seconds. The default interval is 30 seconds.

Guard Tour


A Guard Tour displays the video streams from different preset positions, one-by-one, in a pre-determined order or at random, and for configurable time periods. Once the preset position has been set, and added to the guard tour, you can decide the viewing time in seconds or minutes in the **Guard Tour Setup** window. You can also decide the order in which you will view these presets, or you can choose a **Random view order** in this same window.

Advanced

The **Control Settings** enable managing the different controls provided for PTZ.


The **Panel Shortcut Command Buttons** are controls for creating and saving Panel Shortcut Command Buttons. These buttons provide direct access to various built-in auxiliary commands provided by the PTZ driver. The buttons are displayed in the PTZ Panel, which can be viewed in the **Live View** page by clicking the **Ctrl panel** button.

See the online help files  on this page for more information.

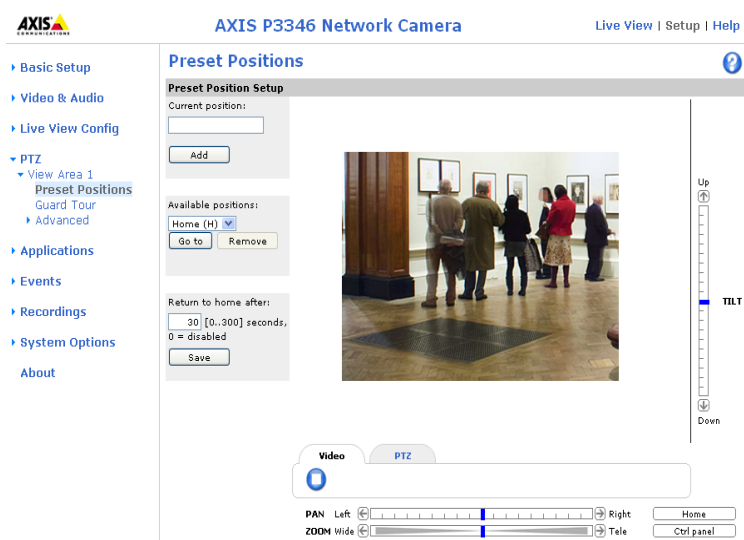

Applications

Application Packages

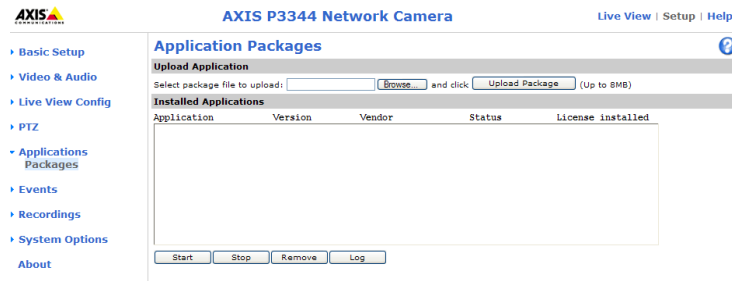

The Applications feature allows you to upload third party applications for use on this device. Listed under **Applications > Packages** are the applications that have already been installed. Click on the name to view the menu options – **Settings**, **License** and **About**.

Settings – This is dependent on the application.

License – Once uploaded some applications need a license to run, and a license code is required for the uploaded application. If there is an Internet connection in the camera, **Automatic Installation** appears in the web page. If there is no Internet connection to the camera, go to www.axis.com to acquire a License key file. You will need a license code and the device's serial number to receive a license key.

About – Details support for this application. To upload an application, browse to the package and click **Upload Package**.

Installed Applications – A list of installed applications with information about the version, and the vendor; the status of the application (running or not running), and information about the license (if installed).

Start/Stop – Start or stop the application.

Remove – To delete an application, select it and click **Remove**.

Log – To generate a log of the application happenings, select an application and click **Log**. This log is helpful when requesting support from the application's vendor.

Note:

It is recommended that you do not run more than one application at a time. Also do not run an application when the motion detection feature is active.

Events

Pre-defined parameters, known as an **event** or **Event Type** can trigger specific actions in the camera. A common event type is an alarm that causes the camera to upload images. Many event types use an **Event Server**, to receive uploaded images.

An event that is triggered by a signal, such as a door switch, motion detection, or system event, is called a **triggered event**. See page 30.

A **scheduled event** is one that runs at pre-programmed times.

An **Action** refers to how the camera responds when the event occurs.

This section describes how to configure the camera to perform certain actions when events occur.

Event Servers

Event Servers are used to receive uploaded image files and/or notification messages. To set up Event Server connections in your camera, go to **Setup > Events > Event Servers** and enter the required information for the required server type.


Server type	Purpose	Information required
FTP Server	Receives uploaded images	- Descriptive name of your choice - Network address (IP address or host name) - User Name and Password
HTTP Server	- Receives notification messages - Receives uploaded images	- Descriptive name of your choice - URL (IP address or host name) - User Name and Password
TCP Server	Receives notification messages	- Descriptive name of your choice - Network address (IP address or host name) - Port number

For details on each setting, see the online help  available from each web page.

When the setup is complete, the connection can be tested by clicking the **Test** button (the connection test takes approximately 10 seconds).

Event Types

An **Event Type** describes how and when the camera performs certain actions.

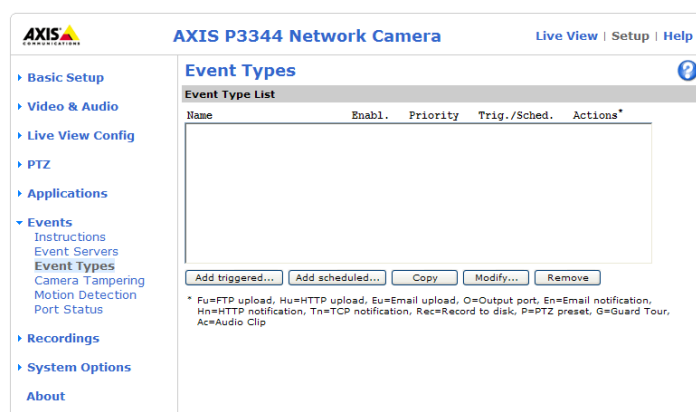

Example: If an event has been configured to detect and respond to motion, and somebody passes in front of a camera, the camera records and saves images to an FTP server, and sends a notification e-mail to an e-mail address. Images can be sent as e-mail attachments.

Triggered Event

A triggered event could be activated by:

- a manually activated action, such as from an action button in the web interface
- detected movement in a configured motion detection window
- on restart (reboot), after power loss
- camera tampering
- input ports
- IR cut filter
- audio
- full disk
- fan malfunction
- application trigger
- temperature
- pan tilt zoom

How to set up a triggered event

The following example describes how to set up the camera to upload images when the main door is opened.

1. Click **Add triggered...** on the **Event Types** page. The **Triggered Event Type Setup** page appears.
2. Enter a descriptive **Name** for the event, such as Motion Detection. To configure motion detection see page 33.
3. Set the **Priority** - High, Normal or Low (see the online help).
4. Set the **Respond to Trigger...** parameters to define when the event is active, for example, after office hours.
5. Select the trigger alternative from the **Triggered by...** drop-down list.
6. Set the **When Triggered...** parameters, that is what the camera will do if motion is detected; this could be uploading images to an FTP server or sending an e-mail notification.
7. Click **OK** to save the event in the Event Types list.

Please see the online help  for information on the different options.

Note: Up to 10 event types can be configured in the camera, and up to three of these can be configured to upload images. File names can be formatted according to specific requirements. See **File Naming & Date/Time Formats** in the online help .

Pre-trigger and Post-trigger buffers

This function is useful when checking to see what happened immediately before and/or after a trigger, for example, 30 seconds before and/or after a door was opened.

In the **Event Types** page, select **Add Triggered...** and The **Triggered Event Type Setup** dialog appears. Check the **Save stream** checkbox option under **When Triggered...** to view the options. All uploaded images are JPEG images.

Include pre-trigger buffer - images stored internally in the server from the time immediately preceding the trigger. Check the box option to enable the pre-trigger buffer, enter the desired length of time and specify the required image frequency.

Include post-trigger buffer - contains images from the time immediately after the trigger. Configure as for pre-trigger.

Notes:

- Pre-trigger and Post-trigger buffers will be lost if the connection to the event server fails.
- The maximum length of the pre-/post-buffer depends on the video image size and selected frame rate.
- If the pre- or post-buffer is too large for the camera's internal memory, the frame rate is reduced and no image will be uploaded. If this occurs, an entry is created in the unit's log file.

Continue image upload (unbuffered) – enables the upload of video images for a fixed length of time. Specify the length of time for the uploaded recording, in seconds, minutes or hours, or for as long as the trigger is active. Finally, set the desired image frequency to the maximum (the maximum available) or to a specified frame rate. The frame rate will be the best possible, but might not be as high as specified, especially if uploading via a slow connection.

Scheduled Event

A **Scheduled event** can be activated at preset times, in a repeating pattern on selected weekdays. Please see the online help  for descriptions of each available option.

Configuration example:

1. Click **Add scheduled...** on the **Event Types** page. The **Scheduled Event Type Setup** dialog appears.
2. Enter a descriptive **Name** for the event, such as **Scheduled e-mail upload**.
3. Set the **Priority** (High, Normal or Low).
4. Set the **Activation Time** parameters (24h clock) for the event – start on Sundays at 13.00 with a duration of 12 hours.
5. Set the **When Activated...** parameters, (what the camera would do at the specified time) for example, send uploaded images to an e-mail address.
6. Click **OK** to save the Event in the Event Types list.

Camera Tampering

The camera tampering application generates an alarm whenever the camera is repositioned, or when the lens is covered, sprayed, or severely defocused. You must first create an event (see *How to set up a triggered event*, on page 30) for the camera to send an alarm.

The **Minimum duration** parameter sets the minimum tampering period, that is an alarm will not be triggered until this period has lapsed, even if the tampering conditions are otherwise met. This can help prevent false alarms for known conditions that affect the image. If the camera lens is sprayed or covered so that the camera live view becomes dark, it will not be possible to distinguish this situation from other situations where the same effect is seen, such as when lighting conditions change.

When the **Alarm for dark images** parameter is enabled, alarms are generated for all cases where the lights are either dimmed or turned off, or if the lens is sprayed, covered, or rendered severely out of focus. If not enabled, no alarm will be sent. After you define these settings, click **Save**.


Motion Detection

Motion detection is used to generate an alarm whenever movement occurs (or stops) in the video image. It is possible to configure a total of 10 Include and/or Exclude windows for motion detection.

- Included windows target specific areas within the whole video image
- Excluded windows define areas within an Include window that should be ignored (areas outside Include windows are automatically ignored)

Once configured, the motion detection windows appear in the list of available triggers, for triggering events. See *How to set up a triggered event*, on page 30.

Note: Using the motion detection feature may decrease the camera's overall performance.

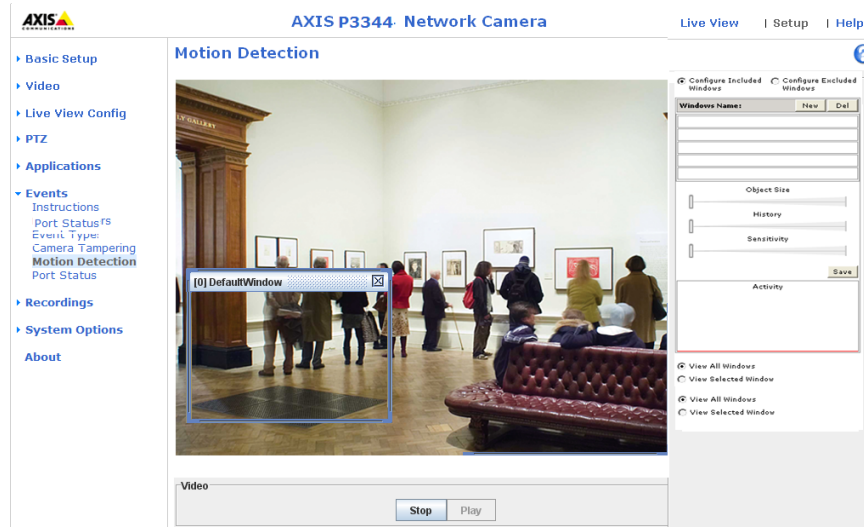

Configuring Motion Detection

1. Click **Motion Detection** in the **Events** menu.
2. Click the **New** button against **Windows Name**.
3. Select the **Configure Included Windows** or the **Configure Excluded Windows** option to define an Include or Exclude window, and enter a descriptive name in the field below.
4. Adjust the size (drag the bottom right-hand corner) and position (click on the text at the top and drag to the desired position) of the active window.
5. Adjust the **Object Size**, **History** and **Sensitivity** profile sliders (see table below for details). Any detected motion within an active window is then indicated by red peaks in the **Activity** window (the active window has a red frame).
6. Click **Save**.

To exclude parts of the Include window, select the **Exclude** option and position the Exclude window as required, within the Include window.

Please see the online help  for descriptions of each available option.

	Object Size	History	Sensitivity
High level	Only very large objects trigger motion detection	An object that appears in the region will trigger the motion detection for a long period	Ordinary colored objects on ordinary backgrounds will trigger the motion detection
Low level	Even very small objects trigger motion detection	An object that appears in the region will trigger motion detection for only a very short period	Only very bright objects on a dark background trigger motion detection
Default value	Low	High	High

Tips!

- Avoid triggering on small objects in the video image by setting the **object size** level to high.
- Use several small Motion Detection windows rather than one large window, if triggers on small movements or objects are desired.
- To reduce the number of triggers if there is a lot of movement during a short period of time, select a high **history** level.
- To only detect flashing light, select low **sensitivity**. In other cases, a high **sensitivity** level is recommended.

Port Status

This list shows the status for the 1 input port and 1 output port supported by the Network Camera.

The ports shown in the list cannot be configured here – this must be done from **Ports & Devices** under **System Options**, which requires administrator access.

Recordings

AXIS P3346 Network Camera Live View | Setup | Help

Recording List - Events

Filter

Recording time:

From: First recording (yyyy-mm-dd hh:mm)

To: Now (2010-07-20 08:43) (yyyy-mm-dd hh:mm)

Event: Any

Storage: SD Card

Sort: Descending

Results: max 20 recordings at a time

Recording

Start time	Duration	Event	Locked
2009-05-19 18:12:11...	00:00:32	Input	no
2009-05-19 15:25:08...	00:02:00	Tampering	no
2009-05-17 14:26:03...	00:00:08	Motion	no
2009-05-17 13:49:59...	00:02:00	Tampering	no
2009-05-12 12:44:48...	00:00:09	Motion	no

Play... Properties... Lock/Unlock Download Remove

The Network Camera can be set to record continuously or as result of a triggered or scheduled event. See *Continuous Recording*, on page 35 and *Event Types*, on page 29 for more information. The Recording List window contains a list of recordings made to the local storage. It shows each recording's start time, length, the event type used to start the recording, and if the recording is locked so that it can neither be deleted nor recorded over.

To view a recording, select it from the list and click the **Play** button.

For detailed recording and video information, select an individual recording from the list and click the **Properties** button.

Use the **Lock/Unlock** button to control whether a recording can either be removed. If the recording is important and needs to be saved for future use, locking the recording can help prevent its accidental removal.

Recordings can be downloaded by selecting one or more recordings and clicking **Download**. The package downloaded is a zip file containing a minimum of 3 files, of which the .mkv or Matroska file is the actual recording.

Note

To play recordings in Windows Media Player download and install AXIS Matroska File Splitter from www.axis.com/techsup/software/ For more information on Matroska files see the online help ? .

The **Remove** button is used to delete unlocked recordings.

Filter – Use the filter to narrow down the list according to certain criteria such as a particular time frame. Note that certain filters, may take a long time to complete.

For more information on filters see the online help ? .

Continuous Recording

The AXIS P33 Series network camera can be configured to continuously save video to local storage. Automatic Disk Cleanup should be enabled when using Continuous Recording to prevent the local storage from becoming full. See *Storage – Disk Management*, on page 44.

Recording Settings

Enabled – Must be checked to record continuously.

Disk – Shows as SD Card for this product.

Stream Profile – Select a stream profile to use for recordings. For more information, see *Stream Profiles*, on page 14.

Note: The recording will be restarted and all previous continuous recordings will be removed if Stream profile is changed.

Click **Save** to activate these settings.

Recording

Start time – Shows the time the current continuous recording began. If no continuous recording is taking place the status will display as Not started.

Duration – Shows the length of the current continuous recording.

Restart – Click to start a new recording.

Note: All previous continuous recording data will be removed.

From – To play or download the recording from a point in time, enter the year, month, day and the time in hours and minutes.

Duration – Enter the amount of the recording to play or download in hours, minutes and seconds.

Play... – Click this button to open a window to play the selected amount of the continuous recording.

Download – Click this button to download the recorded video to a storage disk. The package downloaded is a zip file containing a minimum of 3 files, of which the .mkv or Matroska file is the actual recording. The zip file is named after the time set in the **From** field.

Notes:

- The zip file will contain at least the time period selected. The first matroska file contains the start time, and the last matroska contains at least the stop time
- To play recordings in Windows Media Player download and install AXIS Matroska File Splitter from www.axis.com/techsup/software/

System Options

Security

Users

User access control is enabled by default. An administrator can set up other users, by giving them user names and passwords. It is also possible to allow anonymous viewer login, which means that anybody may access the Live View page:

The user list displays the authorized users and user groups (levels):

Viewer	Provides the lowest level of access, which only allows access to the Live View page.
Operator	An operator can view the Live View page, create and modify events, and adjust certain other settings. Operators have no access to System Options.
Administrator	An administrator has unrestricted access to all menus for configuration and can determine the registration of all other users.

HTTP/RTSP Password Settings – Select the type of password. You may need to allow unencrypted passwords if there are viewing clients that do not support encryption, or if you recently upgraded the firmware and the existing clients support encryption, but need to log in again, and be configured to use this functionality.

User Settings – Check the option your require.

- Enabling **anonymous viewer login** – allows any viewer direct access to the Live View page.
- The **Enable anonymous PTZ control login** option allows anonymous users to join a queue for gaining control of the PTZ controls provided by the Network Camera. See *PTZ*, on page 27 for more information on Pan Tilt Zoom settings.
- **Enable Basic Setup** – Before using the Network Camera, there are certain settings that should be defined, most of which require Administrator access privileges. You can quickly access these settings through **Basic Setup** in the menu. All settings are also available from the standard **Setup** link in the menu. **Basic Setup** is enabled by default but can be disabled and removed from the menu.

IP Address Filter

Enable IP Address Filtering to allow or deny access to the network cameras. Once enabled, the IP addresses in the list are allowed or denied access according to the choice made in the drop-down list **Allow/Deny the following IP addresses**.

The administrator can add up to 256 IP address entries to the list (a single entry can contain multiple IP addresses). The users from these IP addresses need to be specified in the user list with the appropriate access rights. This is done from **Setup > System Options > Security > Users**.

HTTPS

The network cameras support encrypted browsing using HTTPS.

A **self-signed certificate** can be used until a Certificate Authority-issued certificate has been obtained. Click the **Create self-signed Certificate** button to install a self-signed certificate. Although self-signed certificates are free and offer some protection, true security is only implemented after the installation of a signed certificate issued by a certificate authority.

A signed certificate can be obtained from an issuing Certificate Authority by clicking the **Create Certificate Request** button. When the signed certificate is returned, click the **Install signed certificate** button to import the certificate. The properties of any certificate request currently resident in the camera or installed can also be viewed by clicking the **Properties...** button. The HTTPS Connection Policy must also be set in the drop-down lists to enable HTTPS in the camera.

For more information, please refer to the online help .

IEEE 802.1X

IEEE 802.1X is a standard for port-based Network Admission Control providing secure authentication of wired and wireless network devices. IEEE 802.1X is based on EAP (Extensible Authentication Protocol).

To access a network protected by IEEE 802.1X, devices must authenticate themselves. The authentication is performed by a third-party entity called an authentication server, typically a RADIUS server, examples of which are FreeRADIUS and Microsoft Internet Authentication Service. In Axis implementation, the network device and the authentication server authenticate themselves with the help of digital certificates using EAP-TLS (Extensible Authentication Protocol – Transport Layer Security). The certificates are provided by an Certification Authority (CA). You need:

- a CA certificate to validate the identity of the authentication server
- a CA-signed client certificate and a private key to authenticate the network device.

To allow the network device to access a network protected by IEEE 802.1X:

1. Obtain a CA certificate, a client certificate and a client private key (contact your network administrator).
2. Go to Setup > System Options > Security > IEEE 802.1X and upload the CA certificate, the client certificate and the client private key.
3. Under SETTINGS, select the EAPOL version, provide your EAP identity and private key password.
4. Check the box to enable IEEE 802.1X and click **Save**.

Certificates

CA Certificate – The CA certificate is used to validate the identity of the authentication server. Enter the path to the certificate directly, or locate the file using the Browse button. Then click Upload. To remove a certificate, click Remove.

Client Certificate/Client private key – The client certificate and private key are used to authenticate the network device. They can be uploaded as separate files or in one combined file (e.g. a PFX file or a PEM file). Use the Client private key field if uploading one combined file. For each file, enter the path to the file, or locate the file using the **Browse** button. Then click Upload. To remove a file, click **Remove**.

Settings

Eapol version – Select the EAPOL version (1 or 2) as used in your network switch.

Eap identity – Enter the user identity (maximum 16 characters) associated with your certificate.

Private key password – Enter the password (maximum 16 characters) for the private key.

Enable IEEE 802.1X – Check the box to enable the IEEE 802.1X protocol.

Audio Support

Enabling audio support from this page will allow clients to retrieve audio streams from the network camera.

Date & Time

Current Server Time – Displays the current date and time (24h clock). The time can be displayed in 12h clock format in the overlay (see below).

New Server Time – Select your time zone from the drop-down list. If you want the server clock to automatically adjust for daylight savings time, select the **Automatically adjust for daylight saving time changes** option.

From the **Time Mode** section, select the preferred method to use for setting the time:

- **Synchronize with computer time** – sets the time from the clock on your computer.

- **Synchronize with NTP Server** - the camera will obtain the time from an NTP server on a regular basis.
- **Set manually** - this option allows you to manually set the time and date.

Note:

If using a host name for the NTP server, a DNS server must be configured under **TCP/IP** settings.
See **Network > Basic TCP/IP Settings** below.

Date & Time Format Used in Images – Specify the formats for the date and time (12h or 24h) displayed in the video streams.

Use the predefined formats or use your own custom date and time formats. See **Advanced File Naming & Date/Time Formats** in the online help  for information on how to create your own date and time formats.

Network

Basic TCP/IP Settings

Your Axis network camera supports both IP version 4 and IP version 6. Both versions may be enabled simultaneously, and at least one version must always be enabled. When using IPv4, the IP address for the camera can be set automatically via DHCP, or a static IP address can be set manually. If IPv6 is enabled, the network cameras receive an IP address according to the configuration in the network router. There are also options for using AVHS (AXIS Video Hosting System) and AXIS Internet Dynamic DNS Service. For more information on setting the IP address, see the online help [?](#).

Network Settings – Click the **View** button for an overview of the IP configuration of the network camera.

IPv4 Address Configuration – Check the **Enable IPv4** box option to enable IPv4.

Obtain IP address via DHCP – Dynamic Host Configuration Protocol (DHCP) is a protocol that lets network administrators centrally manage and automate the assignment of IP addresses on a network. DHCP is enabled by default. Although a DHCP server is mostly used to set an IP address dynamically, it is also possible to use it to set a static, known IP address for a particular MAC address.

Note:

DHCP should only be enabled if your DHCP server can update a DNS server, which then allows you to access the Network Camera by name (host name). If DHCP is enabled and you cannot access the unit, run AXIS IP Utility to search the network for connected Axis products or reset the network camera to factory default settings and then perform the installation again.

Use the following IP address – To use a static IP address for the Network Camera, check the radio button and then make the following settings:

- **IP address** – Specify a unique IP address for your Network Camera. (To check if the IP address you intend to use is available or not, click the Test button)
- **Subnet mask** – Specify the mask for the subnet the Network Camera is located on
- **Default router** – Specify the IP address of the default router (gateway) used for connecting devices attached to different networks and network segments.

IPv6 Address Configuration – Check the **Enable IPv6** box option to enable IPv6. Other settings for IPv6 are configured in the network router.

Services

Enable ARP/Ping setting of IP address – The IP address can be set using the ARP/Ping method, which associates the unit's MAC address with an IP address. Check this box to enable the service. Leave disabled to prevent unintentional resetting of the IP address.

Notes:

- The ARP/Ping service is automatically disabled two minutes after the unit is started, or as soon as an IP address is set. In order to reset the IP address, the camera must be restarted to activate ARP/Ping for an additional two minutes.
- Pinging the unit is still possible when this service is disabled.

AXIS Video Hosting System (AVHS)

AVHS used in conjunction with an AVHS service provides easy and secure Internet access to live and recorded video accessible from any location. For more information and help to find a local AVHS Service Provider go to www.axis.com/products/avhs

Enable AVHS – Enabled by default; if AVHS is not to be used this option can be disabled.

One-click enabled – Press the camera's control button (see *Hardware overview*, on page 6) to connect to an AVHS service over the Internet. Once registered, **Always** will be enabled and the camera will stay connected to the AVHS service. If the camera is not registered within 24 hours from when the button was pressed, the camera will disconnect from the AVHS service.

Always – The camera will constantly attempt to connect to the AVHS service over the Internet; once registered the camera will stay connected to the service. This option can be used when the camera is already installed and it is not convenient to use the one-click installation.

AXIS Internet Dynamic DNS Service – Use the AXIS Internet Dynamic DNS service to assign a host name for easy access to your network camera (requires Internet access).

Click **Settings...** to register the camera with the Axis Internet Dynamic DNS service, or to modify the existing settings (requires access to the Internet). The domain name currently registered at the Axis Internet Dynamic DNS service for your product can at any time be removed.

For more information, refer to the online help .

Advanced TCP/IP Settings

DNS Configuration – DNS (Domain Name Service) provides the translation of host names to IP addresses on your network.

Obtain DNS server address via DHCP – Automatically use the DNS server settings provided by the DHCP server. Click the **View** button to see the current settings.

Use the following DNS server address – Enter the desired DNS server by specifying the following:

Domain name – Enter the domain(s) to search for the host name used by the network cameras. Multiple domains can be separated by semicolons (;). The host name is always the first part of a Fully Qualified Domain Name, for example, **myserver** is the host name in the Fully Qualified Domain Name **myserver.mycompany.com** where **mycompany.com** is the Domain name.

Primary and Secondary DNS servers – Enter the IP addresses of the primary, and secondary DNS servers.

Note:

This is not mandatory with regard to secondary DNS servers.

NTP Configuration – Check the **Obtain NTP server address via DHCP** radio button to automatically look up and use the NTP server settings as provided by DHCP. Click the **View** button to see the current settings.

Use the following NTP server address – To create manual settings, check this radio button and enter the host name or IP address of the NTP server.

Host Name Configuration – The network cameras can be accessed using a host name, instead of an IP address. The host name is usually the same as the assigned DNS Name.


For more information, please see *Security*, on page 36.

Link-Local IPv4 Address – This is enabled by default and assigns the network cameras an additional IP address for use with UPnPTM. The camera can have both a Link-Local IP and a static/DHCP-supplied IP address at the same time – these will not affect each other.

HTTP and HTTPS – The default HTTP/HTTPS port numbers (80 and 443 respectively) can be changed to any port within the range 1024-65535. This is useful for simple security port mapping, for example.

NAT traversal (port mapping) for IPv4 – A broadband router allows devices on a private network (LAN) to share a single connection to the Internet. This is done by forwarding network traffic from the private network to the "outside", that is, the Internet. Security on the private network (LAN) is increased since most broadband routers are pre-configured to stop attempts to access the private network (LAN) from the public network/Internet.

Use **NAT traversal** when your network cameras are located on an intranet (LAN) and you wish to make it available from the other (WAN) side of a NAT router. With NAT traversal properly configured, all HTTP traffic to an external HTTP port in the NAT router is forwarded to the camera.

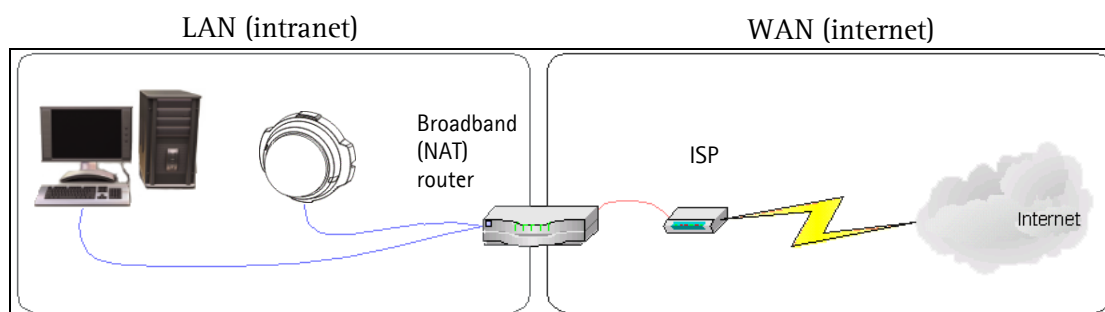

Notes:

- For NAT traversal to work, this must be supported by the broadband router.
- The broadband router has many different names: "NAT router", "Network router", "Internet Gateway", "Broadband sharing device" or "Home firewall" but the essential purpose of the device is the same.

Enable/Disable – when enabled, the network cameras attempt to configure port mapping in a NAT router on your network, using UPnP™. Note that UPnP™ must be enabled in the camera (see **System Options > Network > UPnP**).

Use manually selected NAT router – select this option to manually select a NAT router and enter the IP address for the router in the field provided.

If a router is not manually specified, the network cameras automatically search for NAT routers on your network. If more than one router is found, the default router is selected.

Alternative HTTP port – select this option to manually define an external HTTP port. Enter the port number in the field provided. If no port is entered here a port number is automatically selected when NAT traversal is enabled.

Notes:

- An alternative HTTP port can be used/be active even if NAT traversal is disabled. This is useful if your NAT router does not support UPnP and you need to manually configure port forwarding in the NAT router.
- If you attempt to manually enter a port that is already in use, another available port is automatically selected.
- When the port is selected automatically it is displayed in this field. To change this enter a new port number and click Save.

FTP – The FTP server running in the network cameras enables the upload of new firmware, and user applications. Check the box to enable the service.

RTSP – The RTSP protocol allows a connecting client to start an H.264 stream. Check the box to enable the server and enter the RTSP port number to use. The default setting is 554. Note that H.264 video streams will not be available if this service is not enabled.

SOCKS

SOCKS is a networking proxy protocol. The Axis network camera can be configured to use a SOCKS server to reach networks on the other side of a firewall/proxy server. This functionality is useful if the network camera is located on a local network behind a firewall, and notifications, uploads, alarms, and such need to be sent to a destination outside the local network (such as the Internet). See the online help [?](#) for more information.

QoS (Quality of Service)

Quality of Service (QoS) guarantees a certain level of a specified resource to selected traffic on a network. Quality can be defined as a maintained level of bandwidth, low latency, and no packet losses. The main benefits of a QoS-aware network can be summarized as:

- The ability to prioritize traffic and thus allow critical flows to be served before flows with lesser priority.
- Greater reliability in the network, thanks to the control of the amount of bandwidth an application may use, and thus control over bandwidth races between applications.

The QoS in Axis network video products marks the data packets for various types of network traffic originating from the product. This makes it possible for network routers and switches to reserve a fixed amount of bandwidth for these types of traffic. The network cameras mark the following types of traffic:

- video
- event/alarm
- management network traffic

QoS Settings – For each type of network traffic supported by your Axis network video product, enter a DSCP (Differentiated Services Codepoint) value. This value is used to mark the traffic's IP header. When the marked traffic reaches a network router or switch, the DSCP value in the IP header tells the router or switch the type of treatment to apply to this type of traffic, for example, how much bandwidth to reserve for it. Note that DSCP values can be entered in decimal or hex form, but saved values are always shown in decimal.

For more information on Quality of Service, please see the Axis support web at www.axis.com/techsup

SMTP (email)

Enter the host names (or IP addresses) and port numbers for your primary and secondary mail servers in the fields provided, to enable the sending of notifications and image email messages from the camera to predefined addresses via SMTP.

If your mail server requires authentication, check the box for **Use authentication to log in to this server** and enter the necessary information. See the online help  for more information.

SNMP

The Simple Network Management Protocol (SNMP) allows remote management of network devices. An SNMP community is the group of devices and management station running SNMP. Community names are used to identify groups.

Depending on the level of security required, select the version of SNMP to use. The three levels of security are:

SNMP v1/v2 – Select either SNMP v1 that includes no security, or SNMP v2c that uses very simple security.

The community name can be specified as a password for read or read/write access to all supported SNMP objects. The community is the group of network devices using SNMP. The default password for the **Read Community** is **public** and the default password for the **Write community** is **write**.

Traps for SNMP v1/v2

Traps are used by the camera to send messages to a management system for important events or status changes.

If **Enable traps** is selected, enter the email address where the trap message is to be sent as well as the **Trap community** that should receive the message.

There are four types of traps available for the network camera.

- Cold start
- Warm start
- Link up
- Authentication failed

SNMP v3

SNMP v3 – provides encryption and secure passwords. HTTPS must be enabled. To use traps with SNMP v3 an SNMP v3 management application is required.

If the **Enable SNMP v3** option is enabled, provide the Initial user password. Note that the initial password is activated only when HTTPS is enabled and can only be set once.

If HTTPS is enabled, SNMP v1 and SNMP v2c should be disabled.

When SNMP configuration is ready, click **Save** to use the new settings or **Reset** to return to the default values.

UPnP™

The network camera includes support for UPnP™. UPnP™ is enabled by default, and the network camera then is automatically detected by operating systems and clients that support this protocol.

RTP

RTP/ H.264 – These settings are the port range, IP address, port number (video), and Time-To-Live value to use for the video stream(s) in multicast H.264 format. Only certain IP addresses and port numbers should be used for multicast streams. For more information, please see the online help .

Bonjour

The network cameras include support for Bonjour. When enabled, the camera is automatically detected by operating systems and clients that support this.

Storage – Disk Management

Disk Management is used to setup and manage local storage devices. Local storage can be used to save video streams from triggered, scheduled or continuous recordings. For information on how to use the local storage with Triggered and Scheduled Event Type Setup and Continuous Recordings see the online help [?](#).

Storage Device

Once a formatted SD card has been inserted in the SD memory card slot, it is automatically mounted and information such as the available space and the size of the storage device is shown. The disk is full when there is less than 1000KB of space left on the memory card.

The memory card must be formatted to be mountable. Mounting is done automatically when a new memory card is inserted, or when the system boots. The only time you need to do a manual mount, is when you have executed an unmount command and the memory card has not been ejected and reinserted.

Status shows as follows:

- **OK** – The storage device is mounted and working correctly
- **connected** – The storage device is present but not mounted
- **disconnected** – The storage device is not present.
- **failed** – A problem has been discovered.

If the status shows as failed, click **Check disk** to see if the problem can be found and then try **Repair**. As a final measure the storage device might need to be reformatted. If there is important data on the storage device, see *Troubleshooting*, on page 50.

Disks are normally preformatted when purchased, but if for whatever reason you need to...click the **Format** button to format the disk. Any previous data stored on the disk will be lost.

Read only shows the status of write-protect tab on the memory card. The status **no** means the tab is in the write-enabled mode and recordings can be saved to the memory card. The status **yes** means the memory card's tab is in the write-protected/read-only position, or there is a system error and recordings cannot be saved to the memory card.

Important!

To prevent loss of data, click **Unmount** before removing a storage device.

Storage Device Settings

Storage Device Settings is used to configure removal of recorded video.

Automatic disk cleanup

To avoid filling up local storage, Automatic disk cleanup can be set to continually remove older recordings to create more space.

Once enabled, automatic disk cleanup can be set to remove recordings that are older than a set number of days or weeks and when a percentage of the disk is full. For longer or continuous recordings, the oldest part of the recording is removed, it is recommended to have a time and date overlay in the video for proper tracking of recordings. See Text Overlay Settings, on page 14.

Note:

For continuous recording to work properly, do not set the limit to more than 95% full.

Interrupted recordings with an Unknown status, partial recordings and any other recording that has not been removed by disk cleanup can be removed manually from the **Recording List** using the **Remove** button.

Check **Lock disk** to stop writing to the disk and protect recordings from being removed. A locked disk cannot be formatted.

Ports & Devices

This page allows configuration of the input and output ports supported by this device. Ports can be given descriptive names, and their Normal state can be configured.

For more information, see the online help [?](#).

LED

For a listing of all LED behavior, see page 6 or the online help [?](#).

Maintenance

- **Restart** – the camera is restarted without changing any settings.
- **Restore** – the unit is restarted and most current settings are reset to factory default values. The settings that do not reset are:
 - the boot protocol (DHCP or static)
 - the static IP address
 - the default router
 - the subnet mask
 - the product interface language
 - the system time
 - focus and zoom setup
- **Default** – the default button should be used with caution. Pressing this returns the camera's settings to the factory default values (including the IP address).
- **Calibrate** – The Calibrate button is used to reset the optics to the factory default position. This may be necessary in situations where the optics has lost its calibration during transport or has been exposed to extreme vibrations. Focus and Zoom will also be reset to default positions and need to be reconfigured. Go to Video & Audio > Focus & Zoom.

Upgrade Server – See *Upgrading the Firmware*, on page 48.

Support

The **Support Overview** page provides valuable information on troubleshooting and contact information, should you require technical assistance.

The **System Overview** page provides an overview of the camera's status and settings. Information that can be found here includes the camera's firmware version, IP address, security, event and image settings and recent log items. Many of the captions are also links to other pages where you can make adjustments to the camera's settings.

Logs & Reports

When contacting Axis support, please be sure to provide a valid **Server Report** with your query. The **Access Log** is automatically included in the server report.


Information – the **Server Report** and **Parameter List** may prove useful when troubleshooting a problem or when contacting the Axis support web.

- **System Log** – Provides information about system events.
- **Access Log** – By default, the Access Log lists all failed attempts to access the camera but can be configured to list all connections to the camera, whether successful or not. Go to **Support > Logs & Reports > Configuration** and select the desired level of information from the list. See *Configuration – From the drop-down lists, select the level of information to be added to the System Log and Access Log files and the permitted size of the log files.*, on page 46 for more information.
The Access Log is useful for various purposes such as tracking all access to the camera, simple web attraction tracking, system analysis and troubleshooting.
- **Server Report** – Provides information about the server status and should always be included when requesting support.
- **Parameter List** – Shows the unit's parameters and their current settings.
- **Connection List** – Lists all clients that are currently accessing video. It is also used for system analysis and troubleshooting.
- **Crash Report** – Generates an archive with debug information for all running applications. This will typically take several minutes to generate. Technical support may ask for this information if you report a problem.

Configuration – From the drop-down lists, select the level of information to be added to the **System Log** and **Access Log** files and the permitted size of the log files.

The default information level for the Access Log is set to **Critical & Warnings**, i.e. failed connections. However, in an error situation and when requesting support, set it to the highest information level – **Critical & Warnings & Info**.

For the Log Level for Email, select from the drop-down list the level of information to send as email and enter the destination email address.

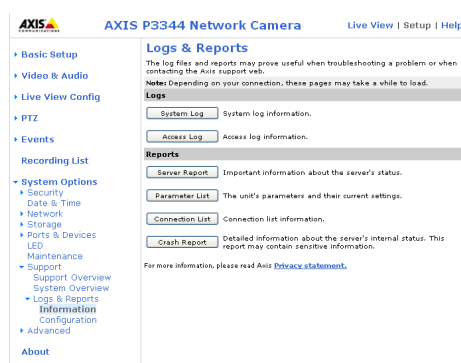

Advanced

Scripting is an advanced function that enables you to customize and use scripts. This function is a very powerful tool.

Caution!

Improper use may cause unexpected behavior or even cause loss of contact with the unit. If a script does cause problems, reset the unit to its factory default settings. A backup file may be of use to return the unit to its latest configuration.

Axis recommends that you do not use this function unless you understand the consequences. Note that Axis support does not provide assistance for problems with customized scripts.

For more information, please visit the Developer pages at www.axis.com/developer

File Upload – To use your own files as custom settings, upload the files first to the Network Camera. Browse to select the file. Select the **User level** for the uploaded file. When the file is displayed correctly in the text field, click the **Upload** button.

Plain Config – this function is for the advanced user with experience of Axis network camera configuration. All parameters can be set and modified from this page. Help is available from the standard help pages.

About

Here you can find basic information about your network camera. You can also view third party software licenses.

Resetting to Factory Default Settings

To reset the camera to the original factory default settings, go to the **System Options > Maintenance** web page (as described in *Maintenance*, on page 45) or use the **Control** button on the side of the camera (see page 6) as described below:

Using the Control Button

To reset the camera to the factory default settings using the Control Button:

1. Disconnect the power cable or if using PoE, disconnect the network cable.
2. Press and hold the Control button while reconnecting power.
3. Keep the Control button pressed until the Status indicator color changes to amber (this may take up to 15 seconds).
4. Release the Control button.
5. When the Status indicator changes to green (which may take up to 1 minute), the process is complete and the camera has been reset. The unit now has the default IP address 192.168.0.90

Note:

For other methods of setting the IP address, please refer to the product's Installation Guide that accompanies the product, or download a copy from www.axis.com

Troubleshooting

Checking the Firmware

Firmware is software that determines the functionality of the network cameras. One of your first actions when troubleshooting a problem should be to check the current firmware version. The latest version may contain a correction that fixes your particular problem. The current firmware version in your camera is displayed on the page **Setup > Basic Setup** or under **About**.

Upgrading the Firmware

When you upgrade your camera with the latest firmware from the Axis Web site, your camera receives the latest functionality available. Always read the upgrade instructions and release notes available with each new release, before updating the firmware.


Note:

Preconfigured and customized settings are saved when the firmware is upgraded (providing the features are available in the new firmware) although this is not guaranteed by Axis Communications. Always read the instructions and release notes available with each new release, before upgrading the firmware.

1. Save the firmware file to your computer. The latest version of the firmware is available free of charge from the Axis website at www.axis.com/techsup
2. Go to **Setup > System Options > Server Maintenance** in the camera's web pages.
3. In the **Upgrade Server** section, browse to the desired firmware file on your computer. Click **Upgrade**.

Notes:

- After starting the upgrade process, always wait at least 5–10 minutes before restarting the camera, even if you suspect the upgrade has failed.
- Your dealer reserves the right to charge for any repair attributable to faulty upgrading by the user.
- The AXIS Camera Management software tool can be used for multiple upgrades. Please see the Axis website at www.axis.com for more information.

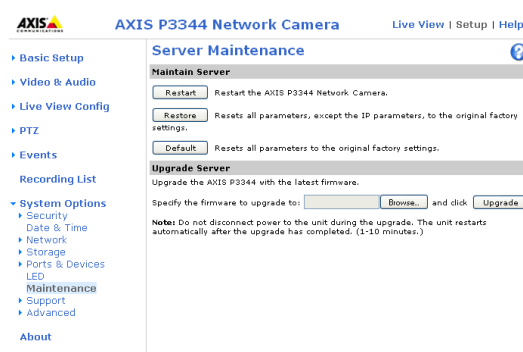

Emergency Recovery Procedure

If power or the network connection to the camera is lost during the upgrade, the process fails and the unit becomes unresponsive. A flashing red Status LED indicates a failed upgrade. To recover the unit, follow the steps below. The serial number is found on the label attached to the bottom of the camera.

1. **UNIX/Linux** – From the command line, type the following:
`arp -s <IP address of camera> <serial number> temp`
`ping -s 408 <IP address of camera>`

Windows – From a command/DOS prompt, type the following:
`arp -s <IP address of camera> <serial number>`
`ping -l 408 -t <IP address of camera>`

2. If the unit does not reply within a few seconds, restart it and wait for a reply. Press CTRL+C to stop Ping.
3. Open a browser and type in the camera's IP address. In the page that appears, use the **Browse** button to select the upgrade file to use, for example, `axisp3343.bin`. Then click the **Load** button to restart the upgrade process.
4. After the upgrade is complete (1–10 minutes), the unit automatically restarts and shows a steady green on the Power and Status LEDs and flashing green or amber on the Network LED.
5. Reinstall the camera, referring to the installation guide.

If the emergency recovery procedure does not get the camera up and running again, please contact Axis support at www.axis.com/techsup/

Axis Support

If you contact Axis support, please help us to help you solve your problems by providing the server report, the log file and a detailed description of the problem.

Server Report - go to **Setup > System Options > Support > Support Overview**. The server report contains important information about the server and its software, as well as a list of the current parameters.

The **Log file** is available from **Setup > System Options > Support > Logs & Reports**. The Log file records events in the unit since the last system restart and can be a useful diagnostic tool when troubleshooting.

Symptoms, Possible Causes, and Remedial Action

Problems setting the IP address	
When using ARP/Ping	Try installation again. The IP address must be set within two minutes after power is applied to the camera. Ensure the Ping length is set to 408. See Installation Guide.
The camera is located on a different subnet	If the IP address intended for the camera and the IP address of your computer are located on different subnets, you will not be able to set the IP address. Contact your network administrator to obtain an appropriate IP address.
The IP address is being used by another device	Disconnect the camera from the network. Run the Ping command. (In a Command/DOS window, type ping and the IP address of the unit). If you receive: Reply from <IP address>: bytes = 32; time = 10 ms..... - this means that the IP address may already be in use by another device on your network. You must obtain a new IP address and reinstall the unit. If you see: Request timed out - this means that the IP address is available for use with your camera. In this case, check all cabling and reinstall the unit.
Possible IP address conflict with another device on the same subnet	The static IP address in the camera is used before the DHCP server sets a dynamic address. This means that if the same default static IP address is used by another device, there may be problems accessing the camera. To avoid this, set the static IP address to 0.0.0.0.
The camera cannot be accessed from a browser	
Problems with ONVIF	If ONVIF is not working as expected, it may be that for security reasons ONVIF was disabled when the camera was accessed over VAPIX. To enable ONVIF, reset the product to Factory default settings (see page 47).
The IP address has been changed by DHCP	If the camera and client are on the same network, Run AXIS IP Utility to locate the camera. Identify the camera using its model or serial number. Alternatively: 1) Move the camera to an isolated network or to one with no DHCP or BOOTP server. Set the IP address again, using the AXIS IP Utility (see the Installation Guide) or the ARP/Ping commands. 2) Access the unit and disable DHCP in the TCP/IP settings. Return the unit to the main network. The unit now has a fixed IP address that will not change. 3) As an alternative to 2), if dynamic IP address via DHCP or BOOTP is required, select the required service and then configure IP address change notification from the network settings. Return the unit to the main network. The unit now has a dynamic IP address, but will notify you if the address changes.
Other networking problems	Test the network cable by connecting it to another network device, then Ping that device from your workstation. See instructions above.
Camera is accessible locally, but not externally	
Broadband router configuration	To configure your broadband router to allow incoming data traffic to the camera, enable the NAT-traversal feature which will attempt to automatically configure the router to allow access to the camera. This is enabled from Setup > System Options > Network > TCP/IP Advanced .
Firewall protection	Check the Internet firewall with your system administrator.
Default routers required	Check if you need to configure the default router settings.
Problems with the H.264 format	
No H.264 displayed in the client	Check that the correct network interface is selected in the AMC control panel applet (network tab).
	Check that the relevant H.264 connection methods are enabled in the AMC control panel applet (network tab).
	In the AMC control applet, select the H.264 tab and click the button Set to default H.264 decoder.
No multicast H.264 displayed in the client	Check with your network administrator that the multicast addresses used by the camera are valid for your network.
	Check with your network administrator if there is a firewall preventing viewing.
Multicast H.264 only accessible by local clients	Check if your router supports multicasting, or if the router settings between the client and the server need to be configured. The TTL (Time To Live) value may need to be increased.

Poor rendering of H.264 images	Color depth set incorrectly on clients. Set to 16-bit or 32-bit color. In the case of blurred text overlays, or other rendering problems, you may need to enable Advanced Video Rendering from the H.264 tab in the AMC control panel applet. Ensure that your graphics card is using the latest device driver. The latest drivers can usually be downloaded from the manufacturer's web site.
Color saturation is different in H.264 and Motion JPEG	Modify the settings for your graphics adapter. Please see the adapter's documentation for more information.
Lower frame rate than expected	Reduce number of applications running on the client computer. Limit the number of simultaneous viewers. Check with the system administrator that there is enough bandwidth available. See also the online help. Check in the AMC control panel applet (H.264 tab) that video processing is not set to Decode only I frames. Lower the image resolution.
Why do I not get 30 frames per second?	See the section <i>General performance considerations</i> , on page 62.
Image degeneration	Decrease the GOV length, see the online help for more information.
The Power indicator is not constantly lit	
Faulty power supply	Check that you are using the same indoor power supply that came with the product.
The Network indicator LEDs are flashing red rapidly	
Hardware failure	Contact your Axis dealer.
No images displayed on web page	
Problem with AMC. (Internet Explorer only)	To enable the updating of video images in Microsoft Internet Explorer, set your browser to allow ActiveX controls. Also, make sure that AXIS Media Control (AMC) component is installed on your computer.
Installation of additional ActiveX component restricted or prohibited	Configure your camera to use a Java applet for updating the video images under Live View Config > Layout > Default Viewer for Internet Explorer. See the online help for more information.
Video/Image problems, general	
Image too dark or too light	Check the video image settings. See the online help on Video and Image Settings.
Missing images in uploads	This can occur when trying to use a larger image buffer than is actually available. Try lowering the frame rate or the upload period.
Slow image update	Configuring pre-buffers, motion detection, high-resolution images, or high frame rates, will affect the performance of the camera.
Poor performance	Poor performance may be caused by heavy network traffic, multiple users accessing the unit, low performance clients, use of features such as Motion Detection, Event handling, Image rotation other than 180 degrees.
Poor quality snapshot images	
Screen incorrectly configured on your workstation	In Display Properties, configure your screen to show at least 65000 colors, that is, at least 16-bit. Using only 16 or 256 colors will produce dithering artifacts in the image.
Overlay/Privacy mask is not displayed	
Incorrect size or location of overlay or privacy mask.	The overlay or privacy mask may have been positioned incorrectly or may be too large. Refer to Overlay Image Requirements and Limitations in the online help for more information.
Browser freezes	
Mozilla/Firefox 1.4 (or later) can sometimes freeze on a slow computer	Lower the image resolution.
Problems uploading files	
Limited space	There is only limited space available for the upload of your own files. Try deleting existing files to free up space.
Motion Detection triggers unexpectedly	
Changes in luminance	Motion detection is based on changes in luminance in the image. This means that if there are sudden changes in the lighting, motion detection may be triggered mistakenly. Lower the sensitivity setting to avoid problems with luminance.

For further assistance, please contact your reseller or see the support pages on the Axis website at www.axis.com/techsup

Technical Specifications for AXIS P3343 Series

Function/group	Item	Specification
Camera	Models	• AXIS P3343-VE/P3344-VE - SVGA, tamper-resistant, indoor • AXIS P3343-V - SVGA, vandal-resistant indoor • AXIS P3343-VE - SVGA, vandal-resistant, outdoor
	Image sensor	1/4" Progressive scan RGB CMOS
	Lens	• Varifocal, DC-iris, remote focus and zoom • 6mm: 2.5 – 6 mm, F1.2, horizontal angle of view: 34° – 72°, vertical angle of view: 24° – 54°, diagonal angle of view: 40° – 88° • 12mm: 3.3 – 12 mm, F1.4, angle of view: 17° – 54°, vertical angle of view: 12° – 40°, diagonal angle of view: 19° – 68°
	Minimum Illumination	6 mm: color: 0.2 lux, F1.2, b/w: 0.04 lux, F1.2 12 mm: color: 0.3 lux, F1.4, b/w: 0.05 lux, F1.4
	Shutter time	1/25000 s to 1/6 s
	Camera angle adjustment	Pan 360°, tilt 170°, rotation 340°
Video	Video compression	• H.264 Baseline profile (MPEG-4 Part 10/AVC) • Motion JPEG
	Resolutions	800x600 to 160x90
	Frame rate H.264	30 fps in all resolutions
	Frame rate Motion JPEG	30 fps in all resolutions
	Video streaming	• Multi-stream H.264 and Motion JPEG • H.264: 1 stream in full resolution and frame rate. 2 individually configured streams in HDTV 720p and full frame rate. • Motion JPEG: 1 stream in full resolution and frame rate. • More streams if identical or limited in frame rate or resolution. • Controllable frame rate and bandwidth • VBR/CBR H.264
	Image settings	• Compression, color, brightness, sharpness, contrast, white balance, exposure control, exposure zones, backlight compensation, fine tuning of behavior at low light, wide dynamic range with dynamic contrast • Rotation: 0°, 90°, 180°, 270° • Mirroring of images • Text and image overlay • Privacy mask
	Users	• 20 simultaneous users • Unlimited number of users using multicast (H.264)
Audio	Audio streaming	Two-way
	Audio compression	• AAC LC 8 kHz 32 kbit/s, 16 kHz 64 kbit/s • G.711 PCM 8 kHz 64 kbit/s • G.726 ADPCM 8 kHz 32 or 24 kbit/s
	Audio input/output	External microphone input or line input, line level output AXIS P3343-VE/P3344-VE and AXIS P3343-V – Built-in microphone
Network	Security	Password protection, IP address filtering, HTTPS encryption, IEEE 802.1X network access control, digest authentication, user access log
	Supported protocols	IPv4/v6, HTTP, HTTPS*, QoS Layer 3 DiffServ, FTP, SMTP, Bonjour, UPnP, SNMPv1/v2c/v3(MIB-II), DNS, DynDNS, NTP, RTSP, RTP, TCP, UDP, IGMP, RTCP, ICMP, DHCP, ARP, SOCKS. *This product includes software developed by the Open SSL Project for use in the Open SSL Tool kit (www.openssl.org)

Function/group	Item	Specification
System Integration	Application Programming Interface	• Open API for software integration, including VAPIX® from Axis Communications*, AXIS Media Control SDK*, event trigger data in video stream, the ONVIF specification available at www.onvif.org • Quality of Service (QoS) layer 3, DiffServ Model • Embedded Linux operating system • Support for AXIS Video Hosting System (AVHS) with One-Click Camera connection *Available at www.axis.com
	Intelligent Video	Video motion detection, active tampering alarm, audio detection
	Alarm triggers	• intelligent video • external input
	Alarm events	• File upload via FTP, HTTP and email • Notification via email, HTTP and TCP • External output activation • Video recording to local storage
	Video buffer	48 MB pre- and post alarm
	Video access from web browser	• Camera live view • Video recording to file (ASF) • Sequence tour for up to 20 Axis video sources • Customizable HTML pages • Windows Vista, XP, 2000, 2003 server • DirectX 9c or higher • For other operating systems and browsers see www.axis.com/techsup
	Installation, management and maintenance	• AXIS Camera Management tool on CD and web-based configuration • Firmware upgrades over HTTP or FTP, firmware available at www.axis.com

Technical Specifications for AXIS P3343 Series

Function/group	Item	Specification
General	Casing	- Aluminum inner camera module with encapsulated electronics - AXIS P3343-VE/P3344-VE: Tamper-resistant casing with polycarbonate base and polycarbonate transparent cover - AXIS P3343-V: 1000 kg (2200 lb.) impact-resistant casing with metal base and rugged polycarbonate transparent cover; Tamper-proof mounting on wall, hard or drop ceiling - AXIS P3343-VE: 1000 kg (2200 lb.) impact-resistant IP66- and NEMA 4X-rated outdoor casing with metal base, rugged polycarbonate transparent cover and integrated dehumidifying membrane
	Processors, memory	- ARTPEC-3, 128 MB RAM, 128 MB Flash - Battery backed-up real-time clock
	Power	- AXIS P3343 and AXIS P3343-V: Power over Ethernet IEEE 802.3af Class 2 - AXIS P3343-VE: Power over Ethernet IEEE 802.3af Class 3
	Connectors	- RJ-45 10BASE-T/100BASE-TX PoE - Terminal block for 1 alarm input and 1 output 3.5 mm jack for Mic in (max 80 mVpp) or Line mono input (max 6.4 Vpp) 3.5 mm jack for Line mono output (max 1.3 Vpp) to active speaker
	Operating conditions	- AXIS P3343-VE/P3344-VE and AXIS P3343-V: 0 – 50 °C (32 – 122 °F), Humidity 20 – 80% RH (non-condensing) - AXIS P3343-VE: -40 – +55 °C (-40 – 131 °F)
	Approvals	- EN 55022 Class B - EN 61000-3-2 - EN 61000-3-3 - EN 55024 - FCC Part 15 Subpart B, Class B - ICES-003 Class B - VCCI Class B - C-tick AS/NZS CISPR 22 - EN 60950-1 - AXIS P3343-VE: IEC 60529 IP66, NEMA 250 Type 4X
	Dimensions (HxWxD)	- AXIS P3343-VE/P3344-VE: 97 mm x 148 mm x 148 mm (3.8" x 5.8" x 5.8") - AXIS P3343-V: 97 x 148 x 148 mm (3.8" x 5.8" x 5.8") - AXIS P3343-VE: 110 x 179 x 179 mm (4.3" x 7.1" x 7.1")
	Weight	- AXIS P3343-VE/P3344-VE: 445 g (1.0 lb.) - AXIS P3343-V: 660 g (1.5 lb.) - AXIS P3343-VE: 1415 g (3.1 lb.)
	Included accessories	Mounting and connector kits, Installation Guide, CD with installation tools, recording software and User's Manual, Windows decoder 1-user license, smoked transparent cover AXIS P3343-VE: mounting bracket, cable shield, weather shield, network cable 5 m (16 ft.) with gasket
	Video management software (not included)	AXIS Camera Station – Video management software for viewing and recording up to 50 cameras See www.axis.com/products/video/software/ for more software applications via partners
	Optional accessories	- AXIS PoE Midspans - Multi-user decoder license pack - AXIS P3343: Drop-ceiling mount - AXIS P3343/-V: Pendant kit, Mounting bracket - AXIS P3343-VE: Pendant kit including weather shield - Audio – I/O cable with gasket

Technical Specifications for AXIS P3344 Series

Function/group	Item	Specification
Camera	Models	• AXIS P3344 - 1MP/HDTV 720p, tamper-resistant, indoor • AXIS P3344-V - 1MP/HDTV 720p, vandal-resistant, indoor • AXIS P3344-VE - 1MP/HDTV 720p, vandal-resistant, outdoor
	Image sensor	1/4" Progressive scan RGB CMOS
	Lens	• Varifocal, DC-iris, remote focus and zoom • 6mm: 2.5 – 6 mm, F1.4, horizontal angle of view: 40° – 87°, vertical angle of view: 24° – 54°, diagonal angle of view: 46° – 102° • 12mm: 3.3 – 12 mm, F1.6, horizontal angle of view: 20° – 70°, vertical angle of view: 12° – 40°, diagonal angle of view: 23° – 81°
	Minimum Illumination	6 mm: color: 0.3 lux, F1.4, b/w: 0.05 lux, F1.4 12 mm: color: 0.4 lux, F1.6, b/w: 0.06 lux, F1.6
	Shutter time	1/25000 s to 1/6 s
	Camera angle adjustment	Pan 360°, tilt 170°, rotation 340°
Video	Video compression	• H.264 Baseline profile (MPEG-4 Part 10/AVC) • Motion JPEG
	Resolutions	1280x800 to 160x90
	Frame rate H.264	30 fps in all resolutions
	Frame rate Motion JPEG	30 fps in all resolutions
	Video streaming	• Multi-stream H.264 and Motion JPEG • H.264: 1 stream in full resolution and frame rate. 2 individually configured streams in HDTV 720p and full frame rate. • Motion JPEG: 1 stream in full resolution and frame rate. • More streams if identical or limited in frame rate or resolution. • Controllable frame rate and bandwidth • VBR/CBR H.264
	Image settings	• Compression, color, brightness, sharpness, contrast, white balance, exposure control, exposure zones, backlight compensation, fine tuning of behavior at low light, wide dynamic range with dynamic contrast • Rotation: 0°, 90°, 180°, 270° • Mirroring of images • Text and image overlay • Privacy mask
Audio	Users	• 20 simultaneous users • Unlimited number of users using multicast (H.264)
	Audio streaming	Two-way
	Audio compression	• AAC LC 8 kHz 32 kbit/s, 16 kHz 64 kbit/s • G.711 PCM 8 kHz 64 kbit/s • G.726 ADPCM 8 kHz 32 or 24 kbit/s
Network	Audio input/output	External microphone input or line input, line level output AXIS P3344 Network Camera and AXIS P3344-V Network Camera: Built-in microphone
	Security	Password protection, IP address filtering, HTTPS encryption, IEEE 802.1X network access control, digest authentication, user access log
Network	Supported protocols	IPv4/v6, HTTP, HTTPS, SSL/TLS*, QoS Layer 3 DiffServ, FTP, SMTP, Bonjour, UPnP, SNMPv1/v2c/v3(MIB-II), DNS, DynDNS, NTP, RTSP, RTP, TCP, UDP, IGMP, RTCP, ICMP, DHCP, ARP, SOCKS. *This product includes software developed by the Open SSL Project for use in the Open SSL Tool kit (www.openssl.org)

Function/group	Item	Specification
System Integration	Application Programming Interface	• Open API for software integration, including VAPIX® from Axis Communications*, AXIS Media Control SDK*, event trigger data in video stream, the ONVIF specification available at www.onvif.org • Quality of Service (QoS) layer 3, DiffServ Model • Embedded Linux operating system • Support for AXIS Video Hosting System (AVHS) with One-Click Camera connection *Available at www.axis.com
	Intelligent Video	Video motion detection, active tampering alarm, audio detection
	Alarm triggers	• intelligent video • external input
	Alarm events	• File upload via FTP, HTTP and email • Notification via email, HTTP and TCP • External output activation • Local storage
	Video buffer	48 MB pre- and post alarm
	Video access from web browser	• Camera live view • Video recording to file (ASF) • Sequence tour for up to 20 Axis video sources • Customizable HTML pages • Windows Vista, XP, 2000, 2003 server • DirectX 9c or higher • For other operating systems and browsers see www.axis.com/techsup
	Installation, management and maintenance	• AXIS Camera Management tool on CD and web-based configuration • Firmware upgrades over HTTP or FTP, firmware available at www.axis.com

Technical Specifications for AXIS P3344 Series

Function/group	Item	Specification
General	Casing	- Aluminum inner camera module with encapsulated electronics - AXIS P3344-VE: Tamper-resistant casing with polycarbonate base and polycarbonate transparent cover - AXIS P3344-V: 1000 kg (2200 lb.) impact-resistant casing with metal base and rugged polycarbonate transparent cover; Tamper-proof mounting on wall, hard or drop ceiling - AXIS P3344-VE: 1000 kg (2200 lb.) impact-resistant IP66- and NEMA 4X-rated outdoor casing with metal base, rugged polycarbonate transparent cover and integrated dehumidifying membrane
	Processors, memory	- ARTPEC-3, 128 MB RAM, 128 MB Flash - Battery backed-up real-time clock
	Power	- AXIS P3344-VE and AXIS P3344-V: Power over Ethernet IEEE 802.3af Class 2 - AXIS P3344-VE: Power over Ethernet IEEE 802.3af Class 3
	Connectors	- RJ-45 10BASE-T/100BASE-TX PoE - Terminal block for 1 alarm input and 1 output 3.5 mm jack for Mic in (max 80 mVpp) or Line mono input (max 6.4 Vpp) 3.5 mm jack for Line mono output (max 1.3 Vpp) to active speaker
	Operating conditions	- AXIS P3344-VE and AXIS P3344-V: 0 – 50 °C (32 – 122 °F), Humidity 20 – 80% RH (non-condensing) - AXIS P3344-VE: -40 – +55 °C (-40 – 131 °F)
	Approvals	- EN 55022 Class B - EN 61000-3-2 - EN 61000-3-3 - EN 55024 - FCC Part 15 Subpart B Class B - ICES-003 Class B - VCCI Class B - C-tick AS/NZS CISPR 22 - EN 60950-1 - AXIS P3344-VE: IEC 60529 IP66, NEMA 250 Type 4X
	Dimensions (HxWxD)	- AXIS P3344-VE: 97 x 148 x 148 mm - AXIS P3344-V: 97 x 148 x 148 mm - AXIS P3344-VE: 110 x 179 x 179 mm
	Weight	- AXIS P3344-VE: 445 g - AXIS P3344-V: 660 g - AXIS P3344-VE: 1415 g
	Included accessories	Mounting and connector kits, Installation Guide, CD with installation tools, recording software and User's Manual, Windows decoder 1-user license, smoked transparent cover AXIS P3344-VE: mounting bracket, cable shield, weather shield, network cable 5 m (16 ft.) with gasket
	Video management software (not included)	AXIS Camera Station – Video management software for viewing and recording up to 50 cameras See www.axis.com/products/video/software/ for more software applications via partners
	Optional accessories	- AXIS PoE Midspans - Multi-user decoder license pack - AXIS P3344: Drop-ceiling mount - AXIS P3344/-V: Pendant kit, Mounting bracket - AXIS P3344-VE: Pendant kit including weather shield - Audio – I/O cable with gasket

Technical Specifications for AXIS P3346 Series

Function/group	Item	Specification
Camera	Models	• AXIS P3346 - 3MP/HDTV 1080p, tamper-resistant, indoor • AXIS P3346-V - 3MP/HDTV 1080p, vandal-resistant, indoor • AXIS P3346-VE - 3MP/HDTV 1080p, vandal-resistant, outdoor
	Image sensor	Progressive scan RGB CMOS 1/3" (effective)
	Lens	• Varifocal with remote zoom and focus, IR corrected, megapixel resolution 3-9 mm, F1.2, P-iris • Horizontal angle of view: 84° - 30° • Vertical angle of view: 63° - 22° • Diagonal angle of view: 105° - 37°
	Day and Night	Automatically removable infrared-cut filter
	Minimum Illumination	Color: 0.5 lux, B/W: 0.08 lux, F1.2
	Shutter time	1/37000 s to 1/6 s
	Camera angle adjustment	Pan 360°, tilt 160°, rotation 340°
Video	Video compression	• H.264 Baseline profile (MPEG-4 Part 10/AVC) • Motion JPEG
	Resolutions	2048x1536 (3MP) to 160x90
	Frame rate H.264	3 MP mode: 20 fps in all resolutions; HDTV 1080p (1920x1080) mode and 2 MP 4:3 (1600x1200) mode: 30 fps in all resolutions
	Frame rate Motion JPEG	3 MP mode: 20 fps in all resolutions; HDTV 1080p (1920x1080) mode and 2 MP 4:3 (1600x1200) mode: 30 fps in all resolutions
	Video streaming	• Multiple streams in H.264 and Motion JPEG. • H.264 and Motion JPEG: 1 stream in resolution and frame rate as specified above. More streams if identical or limited in frame rate or resolution. • Controllable frame rate and bandwidth • VBR/CBR H.264
	Multi-view streaming	Up to 8 individually cropped out view areas. When streaming 5 view areas in VGA resolution, the rate is 20 fps per stream in H.264/Motion JPEG (3 MP capture mode)
	Pan/Tilt/Zoom	Digital PTZ, preset positions, guard tour
	Image settings	• Compression, color, brightness, sharpness, contrast, white balance, exposure control, exposure zones, backlight compensation, fine tuning of behavior at low light, wide dynamic range - dynamic contrast • Rotation: 0°, 90°, 180°, 270° • Mirroring of images • Text and image overlay • Privacy mask
	Users	• 20 simultaneous users • Unlimited number of users using multicast (H.264)
Audio	Audio streaming	Two-way
	Audio compression	• AAC LC 8 kHz 8 to 32 kbit/s, 16 kHz 12 to 64 kbit/s • G.711 PCM 8 kHz 64 kbit/s • G.726 ADPCM 8 kHz 24 to 32 kbit/s
	Audio input/output	• External microphone input or line input, line output • AXIS P3346/-V: Built-in microphone

Technical Specifications for AXIS P3346 Series

Function/group	Item	Specification
Network	Security	Password protection, IP address filtering, HTTPS encryption*, IEEE 802.1X network access control*, digest authentication, user access log
	Supported protocols	IPv4/v6, HTTP, HTTPS, SSL/TLS*, QoS Layer 3 DiffServ, FTP, SMTP, Bonjour, UPnP, SNMPv1/v2c/v3(MIB-II), DNS, DynDNS, NTP, RTSP, RTP, TCP, UDP, IGMP, RTCP, ICMP, DHCP, ARP, SOCKS. *This product includes software developed by the Open SSL Project for use in the Open SSL Tool kit (www.openssl.org)
System Integration	Application Programming Interface	• Open API for software integration, including the ONVIF specification available at www.onvif.org; VAPIX® and AXIS Camera Application Platform from Axis Communications, specifications available at www.axis.com • Event trigger data in video stream • Quality of Service (QoS) layer 3, DiffServ Model • Embedded Linux operating system • Support for AXIS Video Hosting System (AVHS) with One-Click Camera connection
	Intelligent Video	Video motion detection, active tampering alarm, audio detection
	Alarm triggers	• intelligent video • external input
	Alarm events	• File upload via FTP, HTTP and email • Notification via email, HTTP and TCP • External output activation • Video and audio recording to local storage
	Video buffer	64 MB pre- and post alarm
	Video access from web browser	• Camera live view • Video recording to file (ASF) • Windows 7, Vista, XP, 2000, 2003 server • DirectX 9c or higher • For other operating systems and browsers see www.axis.com/techsup
	Installation aids in software	Remote zoom, remote focus, pixel counter
	Installation, management and maintenance	• AXIS Camera Management tool on CD and web-based configuration • Firmware upgrades over HTTP or FTP, firmware available at www.axis.com

Technical Specifications for AXIS P3346 Series

Function/group	Item	Specification
General	Casing	• Polycarbonate transparent cover • Aluminum inner camera module with encapsulated electronics • AXIS P3346: Tamper-resistant polycarbonate casing • AXIS P3346-V: IK10 impact-resistant aluminum casing • AXIS P3346-VE: IP66- and NEMA 4X-rated, IK10 impact-resistant aluminum casing with integrated dehumidifying membrane • Color: white NCS S 1002-B
	Processors, memory	• ARTPEC-3, 256 MB RAM, 128 MB Flash • Battery backed-up real-time clock
	Power	• Power over Ethernet (PoE) IEEE 802.3af • AXIS P3346/AXIS P3346-V: Class 2 • AXIS P3346-VE: Class 3
	Connectors	• RJ-45 10BASE-T/100BASE-TX PoE • Terminal block for 1 alarm input and 1 output • 3.5 mm jack for mic in (max 80 mVpp) or line mono input (max 6.4 Vpp) • 3.5 mm jack for line mono output (max 2.0 Vpp) to active speaker
	Local storage	SD/SDHC memory card slot (card not included)
	Operating conditions	• AXIS P3346/-V: 0 °C to 50 °C (32 °F to 122 °F), humidity 20 - 85% RH (non-condensing) • AXIS P3346-VE: -40 °C to 55 °C (-40 °F to 131 °F)
	Approvals	• EN 55022 Class B • EN 61000-3-2 • EN 61000-3-3 • EN 55024 • FCC Part 15 Subpart B Class B • ICES-003 Class B • VCCI Class B • C-tick AS/NZS CISPR 22 • EN 60950-1 • AXIS P3346-V: IEC 62262 IK10 • AXIS P3346-VE: IEC 60529 IP66, NEMA 250 Type 4X, IEC 62262 IK10
	Dimensions (HxWxD)	• AXIS P3346: 101 x 148 x 148 mm (4.00 x 4.00 x 5.83") • AXIS P3346-V: 104 x 148 x 148 mm (4.07 x 4.07 x 5.83") • AXIS P3346-VE: 117 x 179 x 179 mm (4.59 x 7.05 x 7.05")
	Weight	• AXIS P3346: 490 g (1.1 lb.) • AXIS P3346-V: 700 g (1.6 lb.) • AXIS P3346-VE: 1.6 g (3.5 lb.) or 1.7 kg (3.7 lb.) including weather shield
	Included accessories	• Mounting and connector kits, Installation Guide, CD with installation tools, recording software and User's Manual, Windows decoder 1-user license, smoked transparent cover • AXIS P3346-VE: Mounting bracket, weather shield, cable shield, 5 m (16') network cable with pre-mounted gasket

Technical Specifications for AXIS P3346 Series

Function/group	Item	Specification
	Video management software (not included)	AXIS Camera Station – Video management software for viewing and recording up to 50 cameras See www.axis.com/products/video/software/ for more software applications via partners
	Optional accessories	• AXIS T8412 Installation Display • AXIS PoE Midspans • AXIS P8221 Network I/O Audio Module • AXIS T90A Illuminators • AXIS Camera Station and video management software from Axis' Application Development Partners. For more software information, see www.axis.com/products/video/software/ • AXIS Camera Management • AXIS Mobile Monitor • AXIS P3346: IP51-rated drop-ceiling mount kit • AXIS P3346/-V: Pendant kit, Mounting bracket • AXIS P3346-VE: Pendant kit including weather shield, Audio I/O cable with pre-mounted gasket

General performance considerations

When setting up your system, it is important to consider how various settings and situations will affect performance. Some factors affect the amount of bandwidth (the bit rate) required, others can affect the frame rate, and some affect both. If the load on the CPU reaches its maximum, this will also affect the frame rate.

The following factors are among the most important to consider:

- High image resolutions and/or lower compression levels result in larger images. Bandwidth affected.
- Access by large numbers of Motion JPEG and/or unicast H.264 clients. Bandwidth affected.
- Simultaneous viewing of different streams (resolution, compression) by different clients. Effect on frame rate and bandwidth.
- Accessing both Motion JPEG and H.264 video streams simultaneously. Frame rate and bandwidth affected.
- Heavy usage of event settings affects the camera's CPU load. Frame rate affected.
- Heavy network utilization due to poor infrastructure. Framerate affected.
- Viewing on poorly performing client PCs lowers perceived performance. Frame rate affected.

Glossary of Terms

ActiveX – A standard that enables software components to interact with one another in a networked environment, regardless of the language(s) used to create them. web browsers may come into contact with ActiveX controls, ActiveX documents, and ActiveX scripts. ActiveX controls are often downloaded and installed automatically as required.

Angle – The field of view, relative to a standard lens in a 35mm still camera, expressed in degrees, e.g. 30°. For practical purposes, this is the area that a lens can cover, where the angle of view is determined by the focal length of the lens. A wide-angle lens has a short focal length and covers a wider angle of view than standard or telephoto lenses, which have longer focal lengths.

ARP (Address Resolution Protocol) – This protocol is used to associate an IP address to a hardware MAC address. A request is broadcast on the local network to discover the MAC address for an IP address.

ARTPEC (Axis Real Time Picture Encoder) – This chip is used for image compression, and image processing such as conversion of raw image sensor data, color correction, sharpening, noise filtering etc.

ASIC (Application Specific Integrated Circuit) – A circuit designed for a specific application, as opposed to a general purpose circuit, such as a microprocessor.

Aspect ratio – A ratio of width to height in images. A common aspect ratio used for television screens and computer monitors is 4:3. High-definition television (HDTV) uses an aspect ratio of 9:16.

Autoiris (DC-Iris) – This special type of iris is electrically controlled by the camera, to automatically regulate the amount of light allowed to enter.

Bitmap – A bitmap is a data file representing a rectangular grid of pixels. It defines a display space and color for each pixel (or 'bit') in the display space. This type of image is known as a 'raster graphic.' GIFs and JPEGs are examples of image file types that contain bitmaps.

Because a bitmap uses this fixed raster method, it cannot easily be rescaled without losing definition. Conversely, a vector graphic image uses geometrical shapes to represent the image, and can thus be quickly rescaled.

Bit rate – The bit rate (in kbit/s or Mbit/s) is often referred to as speed, but actually defines the number of bits/time unit and not distance/time unit.

Bonjour – Also known as zero-configuration networking, Bonjour enables devices to automatically discover each other on a network, without having to enter IP addresses or configure DNS servers. Bonjour is a trademark of Apple Computer, Inc.

Broadband – In network engineering terms, this describes transmission methods where two or more signals share the same carrier. In more popular terminology, broadband is taken to mean high-speed data transmission.

CCD (Charged Coupled Device) – This light-sensitive image

device used in many digital cameras is a large integrated circuit that contains hundreds of thousands of photo-sites (pixels) that convert light energy into electronic signals. Its size is measured diagonally and can be 1/4", 1/3", 1/2" or 2/3".

CGI (Common Gateway Interface) – A specification for communication between a web server and other (CGI) programs. For example, a HTML page that contains a form might use a CGI program to process the form data once it is submitted.

CIF (Common Intermediate Format) – CIF refers to the analog video resolutions 352x288 pixels (PAL) and 352x240 pixels (NTSC). See also *Resolution*.

Client/Server – Client/server describes the relationship between two computer programs in which one program, the client, makes a service request from another program, the server, which fulfils the request. Typically, multiple client programs share the services of a common server program. A web browser is a client program that requests services (the sending of web pages or files) from a web server.

CMOS (Complementary Metal Oxide Semiconductor) – A CMOS is a widely used type of semiconductor that uses both negative and positive circuits. Since only one of the circuit types is on at any given time, CMOS chips require less power than chips using just one type of transistor. CMOS image sensors also allow processing circuits to be included on the same chip, an advantage not possible with CCD sensors, which are also much more expensive to produce.

Codec – In communications engineering, a codec is usually a coder/decoder. Codecs are used in integrated circuits or chips that convert e.g. analog video signals into a digital format for transmission. The codec also converts received digital signals back into analog format. A codec uses analog-to-digital conversion and digital-to-analog conversion in the same chip.

Codec can also mean compression/decompression, in which case it is generally taken to mean an algorithm or computer program for reducing the size of large files and programs.

Compression – See *Image compression*.

DC-Iris (Autoiris) – This special type of iris is electrically controlled by the camera, to automatically regulate the amount of light allowed to enter.

DHCP (Dynamic Host Configuration Protocol) – DHCP is a protocol that lets network administrators automate and centrally manage the assignment of Internet Protocol (IP) addresses to network devices in a network.

DHCP uses the concept of a 'lease' or amount of time that a given IP address will be valid for a computer. The lease time can vary, depending on how long a user is likely to require the network connection at a particular location.

DHCP also supports static addresses for e.g. computers running web servers, which need a permanent IP address.

DNS (Domain Name System) – DNS is used to locate and translate Internet domain names into IP (Internet Protocol) addresses. A domain name is a meaningful and easy-to-remember name for an Internet address. For example the domain name *www.example.com* is much easier to remember than 192.0.34.166. The translation tables for domain

names are contained in Domain name servers.

Domain Server – Domains can also be used by organizations who wish to centralize the management of their (Windows) computers. Each user within a domain has an account that usually allows them to log in to and use any computer in the domain, although restrictions may also apply. The domain server is the server that authenticates the users on the network.

Ethernet – Ethernet is the most widely installed local area network technology. An Ethernet LAN typically uses special grades of twisted pair wires. The most commonly installed Ethernet systems are 10BASE-T and 100BASE-T10, which provide transmission speeds up to 10 Mbps and 100 Mbps respectively.

ETRAX (Ethernet Token Ring AXIS) – Axis' own microprocessor.

Factory default settings – These are the settings that originally applied for a device when it was first delivered from the factory. If it should become necessary to reset a device to its factory default settings, this will, for many devices, completely reset any settings that were changed by the user.

Firewall – A firewall works as a barrier between networks, e.g. between a Local Area Network and the Internet. The firewall ensures that only authorized users are allowed to access the one network from the other. A firewall can be software running on a computer, or it can be a standalone hardware device.

Focal length – Measured in millimeters, the focal length of a camera lens determines the width of the horizontal field of view, which in turn is measured in degrees.

FTP (File Transfer Protocol) – An application protocol that uses the TCP/IP protocols. It is used to exchange files between computers/devices on networks.

Frame – A frame is a complete video image. In the 2:1 interlaced scanning format of the RS-170 and CCIR formats, a frame is made up of two separate fields of 262.5 or 312.5 lines interlaced at 60 or 50 Hz to form a complete frame, which appears at 30 or 25 Hz. In video cameras with a progressive scan, each frame is scanned line-by-line and not interlaced; most are also displayed at 30 and 25 Hz.

Frame rate – The frame rate used to describe the frequency at which a video stream is updated is measured in frames per second (fps). A higher frame rate is advantageous when there is movement in the video stream, as it maintains image quality throughout.

Full duplex – Transmission of data in two directions simultaneously. In an audio system this would describe e.g. a telephone system. Half duplex also provides bi-directional communication, but only in one direction at a time, as in a walkie-talkie system.

Gain – Gain is the amplification factor and the extent to which an analog amplifier boosts the strength of a signal. Amplification factors are usually expressed in terms of power. The decibel (dB) is the most common way of quantifying the gain of an amplifier.

Gateway – A gateway is a point in a network that acts as an

entry point to another network. In a corporate network for example, a computer server acting as a gateway often also acts as a proxy server and a firewall server. A gateway is often associated with both a router, which knows where to direct a given packet of data that arrives at the gateway, and a switch, which furnishes the actual path in and out of the gateway for a given packet.

GIF (Graphics Interchange Format) – GIF is one of the most common file formats used for images in web pages. There are two versions of the format, 87a and 89a. Version 89a supports animations, i.e. a short sequence of images within a single GIF file. A GIF89a can also be specified for interlaced presentation.

GOV (Group Of VOPs) – A group of VOPs is the basic unit of an H.264 video stream. The GOV contains different types and numbers of VOPs (I-VOPs, P-VOPs) as determined by the GOV length and GOV structure. See also *VOP*.

GOV length – The GOV length determines the number of images (VOPs) in the GOV structure. See also *GOV* and *VOP*.

GOV structure – The GOV structure describes the composition of an H.264 video stream, as regards the type of images (I-VOPs or P-VOPs) included in the stream, and their internal order. See also *GOV* and *VOP*.

H.264 – Also known as MPEG-4 Part 10. This is the new generation compression standard for digital video. H.264 offers higher video resolution than Motion JPEG or MPEG-4 at the same bit rate and bandwidth, or the same quality video at a lower bit rate.

Half-duplex – See *Full-duplex*.

HTML (Hypertext Markup Language) – HTML is the set of "markup" symbols or codes inserted in a file intended for display in web browser. The markup tells the browser how to display the page's words and images for the user.

HTTP (Hypertext Transfer Protocol) – HTTP is the set of rules for exchanging files (text, graphic images, sound, video, and other multimedia files) on the web. The HTTP protocol runs on top of the TCP/IP suite of protocols.

Hub – A (network) hub is used to connect multiple devices to the network. The hub transmits all data to all devices connected to it, whereas a switch will only transmit the data to the device it is specifically intended for.

Image compression – Image compression minimizes the file size (in bytes) of an image. Two of the most common compressed image formats are JPEG and GIF.

Interlacing – Interlaced video is video captured at 50 pictures (known as fields) per second, of which every 2 consecutive fields (at half height) are then combined into 1 frame. Interlacing was developed many years ago for the analog TV world and is still used widely today. It provides good results when viewing motion in standard TV pictures, although there is always some degree of distortion in the image.

To view interlaced video on e.g. a computer monitor, the video must first be de-interlaced, to produce progressive video, which consists of complete images, one after the other, at 25 frames per second. See also *Progressive scan*.

IP (Internet Protocol) – The Internet Protocol is a method transmitting data over a network. Data to be sent is divided into individual and completely independent "packets." Each computer (or host) on the Internet has at least one address that uniquely identifies it from all others, and each data packet contains both the sender's address and the receiver's address.

The Internet Protocol ensures that the data packets all arrive at the intended address. As IP is a connectionless protocol, which means that there is no established connection between the communication end-points, packets can be sent via different routes and do not need to arrive at the destination in the correct order.

Once the data packets have arrived at the correct destination, another protocol – Transmission Control Protocol (TCP) – puts them in the right order. See also *TCP*.

IP Address – An IP address is simply an address on an IP network used by a computer/device connected to that network. IP addresses allow all the connected computers/devices to find each other and to pass data back and forth.

To avoid conflicts, each IP address on any given network must be unique. An IP address can be assigned as fixed, so that it does not change, or it can be assigned dynamically (and automatically) by DHCP.

An IP address consists of four groups (or quads) of decimal digits separated by periods, e.g. 130.5.5.25. Different parts of the address represent different things. Some part will represent the network number or address, and some other part will represent the local machine address.

See also *IP (Internet Protocol)*.

I-VOP – See *VOP*.

JPEG (Joint Photographic Experts Group) – Together with the GIF file format, JPEG is an image file type commonly used on the web. A JPEG image is a bitmap, and usually has the file suffix '.jpg' or '.jpeg.' When creating a JPEG image, it is possible to configure the level of compression to use. As the lowest compression (i.e. the highest quality) results in the largest file, there is a trade-off between image quality and file size.

kbit/s (kilobits per second) – A measure of the bit rate, i.e. the rate at which bits are passing a given point. See also *Bit rate*.

LAN (Local Area Network) – A LAN is a group of computers and associated devices that typically share common resources within a limited geographical area.

Linux – Linux is an open source operating system within the UNIX family. Because of its robustness and availability, Linux has won popularity in the open source community and among commercial application developers.

MAC address (Media Access Control address) – A MAC address is a unique identifier associated with a piece of networking equipment, or more specifically, its interface with the network. For example, the network card in a computer has its own MAC address.

Manual iris – This is the opposite to an autoiris, i.e. the camera iris must be adjusted manually to regulate the amount of light allowed to reach the image sensor.

Mbit/s (Megabits per second) – A measure of the bit rate, i.e. the rate at which bits are passing a given point. Commonly used to give the 'speed' of a network. A LAN might run at 10 or 100 Mbit/s. See also *Bit rate*.

Monitor – A monitor is very similar to a standard television set, but lacks the electronics to pick up regular television signals.

Motion JPEG – Motion JPEG is a simple compression/decompression technique for networked video. Latency is low and image quality is guaranteed, regardless of movement or complexity of the image. Image quality is controlled by adjusting the compression level, which in turn provides control over the file size, and thereby the bit rate.

High-quality individual images from the Motion JPEG stream are easily extracted. See also *JPEG*.

Megapixel – See *Pixel*.

MPEG-2 – MPEG-2 is the designation for a group of audio and video coding standards, and is typically used to encode audio and video for broadcast signals, including digital satellite and Cable TV. MPEG-2, with some modifications, is also the coding format used by standard commercial DVD movies.

Multicast – Bandwidth-conserving technology that reduces bandwidth usage by simultaneously delivering a single stream of information to multiple network recipients.

Network connectivity – The physical (wired or wireless) and logical (protocol) connection of a computer network or an individual device to a network, such as the Internet or a LAN.

NTSC (National Television System Committee) – NTSC is the television and video standard in the United States. NTSC delivers 525 lines at 60 half-frames/second.

NWay – A network protocol that automatically negotiates the highest possible common transmission speed between two devices.

PAL (Phase Alternating Line) – PAL is the dominant television standard in Europe. PAL delivers 625 lines at 50 half-frames/second.

Ping – Ping is a basic network program used diagnostically to check the status of a network host or device. Ping can be used to see if a particular network address (IP address or host name) is occupied or not, or if the host at that address is responding normally. Ping can be run from e.g. the Windows Command prompt or the command line in UNIX.

Pixel – A pixel is one of the many tiny dots that make up a digital image. The color and intensity of each pixel represents a tiny area of the complete image.

PoE (Power over Ethernet) – Power over Ethernet provides power to a network device via the same cable as used for the network connection. This is very useful for IP-Surveillance and remote monitoring applications in places where it may be too impractical or expensive to power the device from a power outlet.

PPP (Point-to-Point Protocol) – A protocol that uses a serial interface for communication between two network devices. For example, a PC connected by a phone line to a server.

PPTP (Point-to-Point Tunneling Protocol) – A protocol (set of communication rules) that allows corporations to extend their own corporate network through private “tunnels” over the public Internet. In this way a corporation can effectively use a WAN (Wide Area Network) as a large single LAN (Local Area Network). This kind of interconnection is known as a virtual private network (VPN).

Pre/post alarm images – The images from immediately before and after an alarm. These images are stored in a buffer for later retrieval.

Progressive scan – Progressive scan, as opposed to interlaced video, scans the entire picture, line by line every sixteenth of a second. In other words, captured images are not split into separate fields as in interlaced scanning.

Computer monitors do not need interlace to show the picture on the screen, but instead show them progressively, on one line at a time in perfect order, i.e. 1, 2, 3, 4, 5, 6, 7 etc., so there is virtually no ‘flickering’ effect. In a surveillance application, this can be critical when viewing detail within a moving image, such as a person running. A high-quality monitor is required to get the best from progressive scan. See also *Interlacing*.

Protocol – A special set of rules governing how two entities will communicate. Protocols are found at many levels of communication, and there are hardware protocols and software protocols.

Proxy server – In an organization that uses the Internet, a proxy server acts as an intermediary between a workstation user and the Internet. This provides security, administrative control, and a caching service. Any proxy server associated with a gateway server, or part of a gateway server, effectively separates the organization's network from the outside network and the local firewall. It is the firewall server that protects the network against outside intrusion.

A proxy server receives requests for Internet services (such as web page requests) from many users. If the proxy server is also a cache server, it looks in its local cache of previously downloaded web pages. If it finds the page, it is returned to the user without forwarding the request to the Internet. If the page is not in the cache, the proxy server, acting as a client on behalf of the user, uses one of its own IP addresses to request the page from another server over the Internet. When the requested page is returned, the proxy server forwards it to the user that originally requested it.

P-VOP – See *VOP*.

Resolution – Image resolution is a measure of how much detail a digital image can hold: the greater the resolution, the greater the level of detail. Resolution can be specified as the number of pixel-columns (width) by the number of pixel-rows (height), e.g. 320x240.

Alternatively, the total number of pixels (usually in megapixels) in the image can be used. In analog systems it is also common to use other format designations, such as CIF, QCIF, 4CIF, etc.

RTCP (Real-Time Control Protocol) – RTCP provides support for real-time conferencing of groups of any size within an intranet. This support includes source identification and support for gateways like audio and video bridges as well as multicast-to-unicast translators.

RTCP offers quality-of-service feedback from receivers to the multicast group as well as support for the synchronization of different media streams.

RTP (Real-Time Transport Protocol) – RTP is an Internet protocol for the transport of real-time data, e.g. audio and video. It can be used for media-on-demand as well as interactive services such as Internet telephony.

RTSP (Real Time Streaming Protocol) – RTSP is a control protocol, and a starting point for negotiating transports such as RTP, multicast and Unicast, and for negotiating codecs.

RTSP can be considered a ‘remote control’ for controlling the media stream delivered by a media server. RTSP servers typically use RTP as the protocol for the actual transport of audio/video data.

Router – A device that determines the next network point to which a packet should be forwarded on its way to its final destination. A router creates and/or maintains a special routing table that stores information on how best to reach certain destinations. A router is sometimes included as part of a network switch. See also *switch*.

Server – In general, a server is a computer program that provides services to other computer programs in the same or other computers. A computer running a server program is also frequently referred to as a server. In practice, the server may contain any number of server and client programs. A web server is the computer program that supplies the requested HTML pages or files to the client (browser).

Sharpness – This is the control of fine detail within a picture. This feature was originally introduced into color TV sets that used notch filter decoders. This filter took away all high frequency detail in the black and white region of the picture. The sharpness control attempted to put some of that detail back in the picture. Sharpness controls are mostly superfluous in today's high-end TVs. The only logical requirement for it nowadays is on a VHS machine.

SMTP (Simple Mail Transfer Protocol) – SMTP is used for sending and receiving e-mail. However, as it is ‘simple,’ it is limited in its ability to queue messages at the receiving end, and is usually used with one of two other protocols, POP3 or IMAP. These other protocols allow the user to save messages in a server mailbox and download them periodically from the server.

SMTP authentication is an extension of SMTP, whereby the client is required to log into the mail server before or during the sending of email. It can be used to allow legitimate users to send email while denying the service to unauthorized users, such as spammers.

SNMP (Simple Network Management Protocol) – SNMP forms part of the Internet Protocol suite, as defined by the Internet Engineering Task Force. The protocol can support monitoring of network-attached devices for any conditions that warrant administrative attention.

Sockets – Sockets are a method for communication between a client program and a server program over a network. A socket is defined as ‘the endpoint in a connection.’ Sockets are created and used with a set of programming requests or ‘function calls’ sometimes called the sockets application programming

interface (API).

SSL/TSL (Secure Socket Layer/Transport Layer Security)

These two protocols (SSL is succeeded by TSL) are cryptographic protocols that provide secure communication on a network. SSL is commonly used over HTTP to form HTTPS, as used e.g. on the Internet for electronic financial transactions. SSL uses public key certificates to verify the identity of the server.

Subnet/subnet mask – A subnet is an identifiably separate part of an organization's network. Typically, a subnet may represent all the machines at one geographic location, in one building, or on the same local area network (LAN). Having an organization's network divided into subnets allows it to be connected to the Internet with a single shared network address.

The subnet mask is the part of the IP address that tells a network router how to find the subnet that the data packet should be delivered to. Using a subnet mask saves the router having to handle the entire 32-bit IP address; it simply looks at the bits selected by the mask.

Switch – A switch is a network device that connects network segments together, and which selects a path for sending a unit of data to its next destination. In general, a switch is a simpler and faster mechanism than a router, which requires knowledge about the network and how to determine the route. Some switches include the router function. See also *Router*.

TCP (Transmission Control Protocol) – TCP is used along with the Internet Protocol (IP) to transmit data as packets between computers over the network. While IP takes care of the actual packet delivery, TCP keeps track of the individual packets that the communication (e.g. requested a web page file) is divided into, and, when all packets have arrived at their destination, it reassembles them to re-form the complete file.

TCP is a connection-oriented protocol, which means that a connection is established between the two end-points and is maintained until the data has been successfully exchanged between the communicating applications.

Telnet – Telnet is a simple method with which to access another network device, e.g. a computer. The HTTP protocol and the FTP protocols allow you to request specific files from remote computers, but do not allow you logon as a user of that computer. With Telnet, you log on as a regular user with whatever privileges you may have been granted for specific applications and data residing on that computer.

UDP (User Datagram Protocol) – UDP is a communications protocol that offers limited service for exchanging data in a network that uses the Internet Protocol (IP). UDP is an alternative to the Transmission Control Protocol (TCP). The advantage of UDP is that it is not required to deliver all data and may drop network packets when there is e.g. network congestion. This is suitable for live video, as there is no point in re-transmitting old information that will not be displayed anyway.

Unicast – Communication between a single sender and a single receiver over a network. A new connection is established for each new user.

URL (Uniform Resource Locator) – An "address" on the network.

Varifocal lens – A varifocal lens provides a wide range of focal lengths, as opposed to a lens with a fixed focal length, which only provides one.

VPN (Virtual Private Network) – This creates a secure "tunnel" between the points within the VPN. Only devices with the correct "key" will be able to work within the VPN. The VPN network can be within a company LAN (Local Area Network), but different sites can also be connected over the Internet in a secure way. One common use for VPN is for connecting a remote computer to the corporate network, via e.g. a direct phone line or via the Internet.

VOP (Video Object Plane) – A VOP is an image frame in an H.264 video stream. There are several types of VOP:

- An I-VOP is complete image frame.

- A P-VOP codes the differences between images, as long as it is more efficient to do so. Otherwise it codes the whole image, which may also be a completely new image.

WAN (Wide-Area-Network) – Similar to a LAN, but on a larger geographical scale.

W-LAN (Wireless LAN) – A wireless LAN is a wireless local area network that uses radio waves as its carrier: where the network connections for end-users are wireless. The main network structure usually uses cables.

Web server – A web server is a program, which allows web browsers to retrieve files from computers connected to the Internet. The web server listens for requests from web browsers and upon receiving a request for a file sends it back to the browser.

The primary function of a web server is to serve pages to other remote computers; consequently, it needs to be installed on a computer that is permanently connected to the Internet. It also controls access to the server whilst monitoring and logging server access statistics.

WPA-PSK (Wi-Fi Protected Access – Pre-Shared Key) – This wireless encryption method uses a pre-shared key (PSK) for key management. Keys can usually be entered as manual hex values, as hexadecimal characters, or as a Passphrase. WPA-PSK provides a greater degree of security than WEP.

Zoom lens – A zoom lens can be moved (zoomed) to enlarge the view of an object to show more detail.

Index

A

Action Buttons 10, 25
Administrator 15
Alarm 32
AMC 8, 13
ARP/Ping 39
AVHS 53, 56
Axis Media Control 13

B

Backup 47
Bonjour 8, 43
Buffer Size 30
Buffers 30

C

Camera tampering 31
Capture mode 9, 17
Continuous Recording 35
Control Button 47

D

Date & Time 37
Default Viewer 25
Disk Management 44
DNS Configuration 40
DNS Server 40
Domain Name 40

E

Emergency Recovery 48
Enable ARP/Ping 39
Event Servers 29
Events 29

F

FTP Server 29

H

H.264 15
Host Name 40
HTTP Server 29
HTTPS 9, 36, 40

I

IP Address Filtering 36

L

Live View 10
Live View Config 24
Logs & Reports 46

M

Motion Detection 32

N

NAT traversal 9, 40, 41
Network Settings 39
NTP Server 38

O

ONVIF 2, 50, 53, 56

P

Port Status 33
Post-trigger Buffer 30
Pre-trigger Buffer 30

Q

QoS (Quality of Service) 42
QuickTime 13, 25

R

Recovery 48

S

Scheduled Event 31
Security 36
Server Time 37
SNMP 42
Support 46
System Options 36

T

TCP Server 29
TCP/IP Settings 39
Time Mode 37
Troubleshooting 48

U

Upgrade Server 45
UPnP 40, 43
Users 36

V

Video Stream 15
View Area 19

W

WDR 18